

SONY®

Sound Bar

Startup Guide



HT-ST9

Table of contents

Setup

 
1	What's in the box	4
2	Installation	5
3	Connecting a TV	6
4	Connecting other devices	8
5	Turning on the system	9
6	Performing the Easy Setup	10
7	Listening to the sound	11

Please see the supplied Operating Instructions regarding details about the network connection, NFC function, other functions.




Operating Instructions


1 What's in the box




Bar Speaker (1)

 

Grille frame (1)

 


Subwoofer (1)

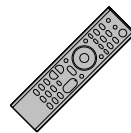


Remote control (1)



R03 (size AAA) batteries (2)

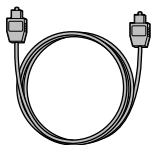

Optical digital cable for a TV (1)

 

Stands* (2) and screws* (2)

* Refer to the Operating Instructions on how to use these items.




Startup Guide (this book) (1)



Operating Instructions (1)


Setting up the remote control

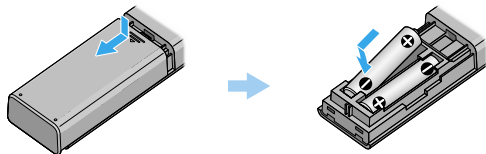

2 Installation



Note Install the Bar Speaker in a way that prevents the speaker unit on the front of the Bar Speaker from being touched.

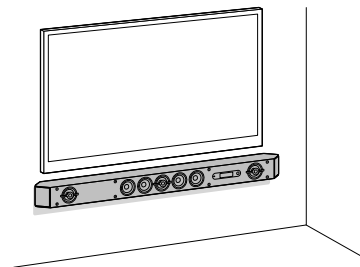

To mount the Bar Speaker on a wall
Refer to the supplied Operating Instructions.

To attach the grille frame
Refer to the supplied Operating Instructions.


3 Connecting a TV

Is the HDMI input terminal on your TV is labeled "ARC" ?

NO

YES

When your TV is not labeled "ARC"

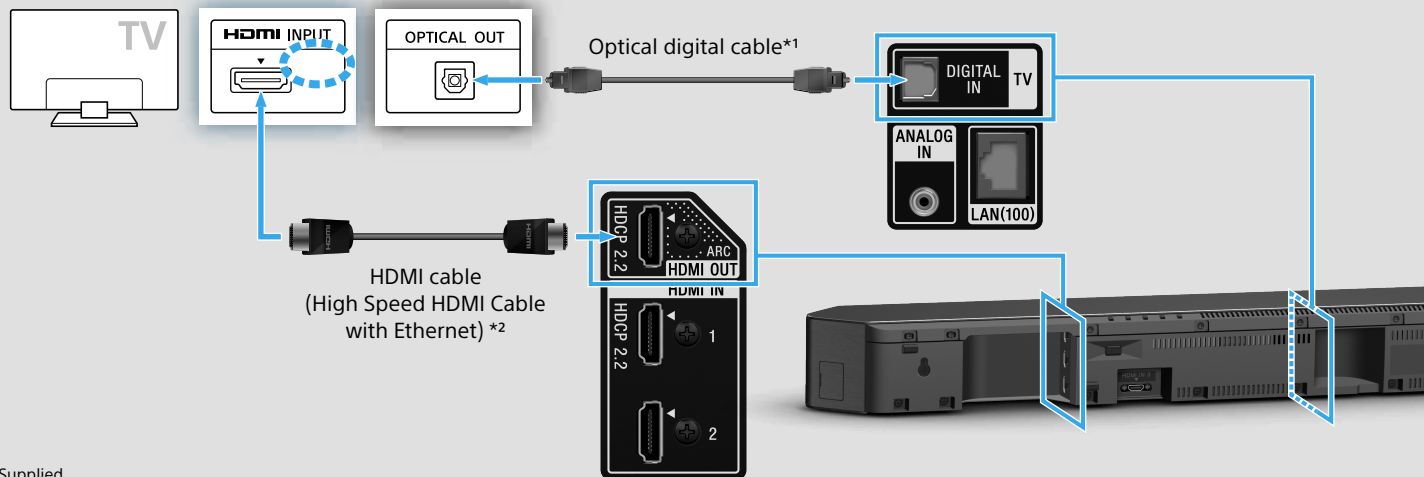


*¹ Supplied.

*² Not supplied. Make sure that the HDMI cable is firmly inserted.


Tip

- When another device is connected to the TV, disconnect the other device from the TV and then connect it to the Bar Speaker (page 8).
- To enjoy copyright-protected 4K content, connect the HDCP 2.2-compatible HDMI jack. For details, refer to "Viewing Copyright-protected 4K Content" in the supplied Operating Instructions.

When your TV is labeled "ARC"

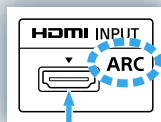


HDMI cable
(High Speed HDMI Cable
with Ethernet) *2

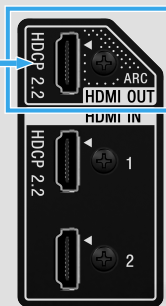

*2 Not supplied. Make sure that the HDMI cable is firmly inserted.

4 Connecting other devices


Connecting Blu-ray Disc™ Player, Cable box or Satellite box, etc.

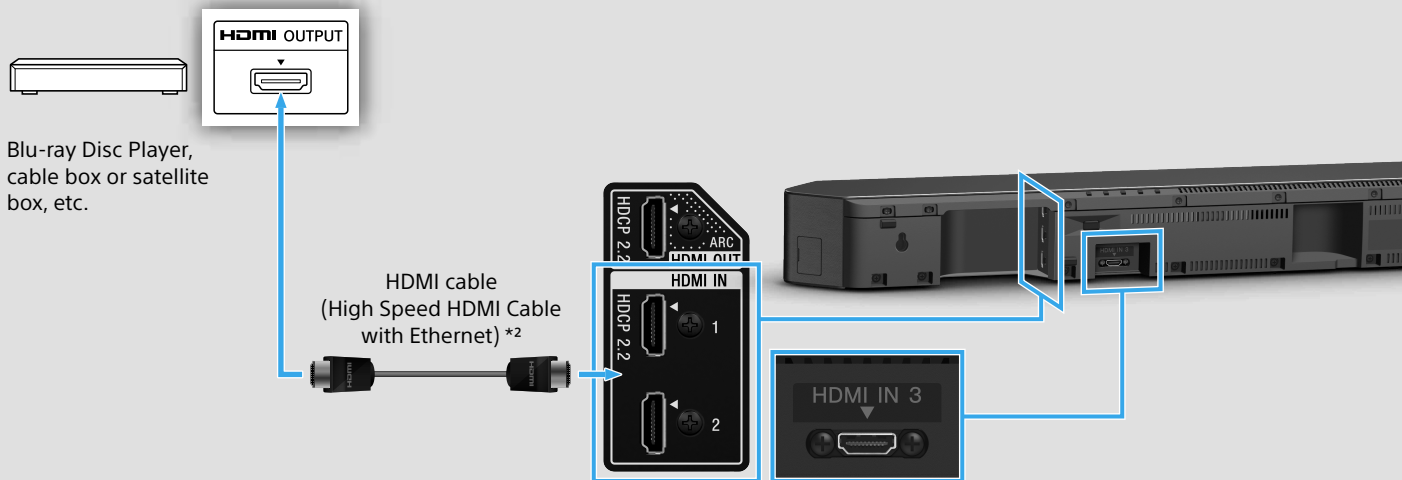

*2 Not supplied. Make sure that the HDMI cable is firmly inserted.

- Tip**
- When another device is connected to the TV, disconnect the other device from the TV and then connect it to the Bar Speaker.
 - To enjoy copyright-protected 4K content, connect the HDCP 2.2-compatible HDMI jack. For details, refer to "Viewing Copyright-protected 4K Content" in the supplied Operating Instructions.

5 Turning on the system

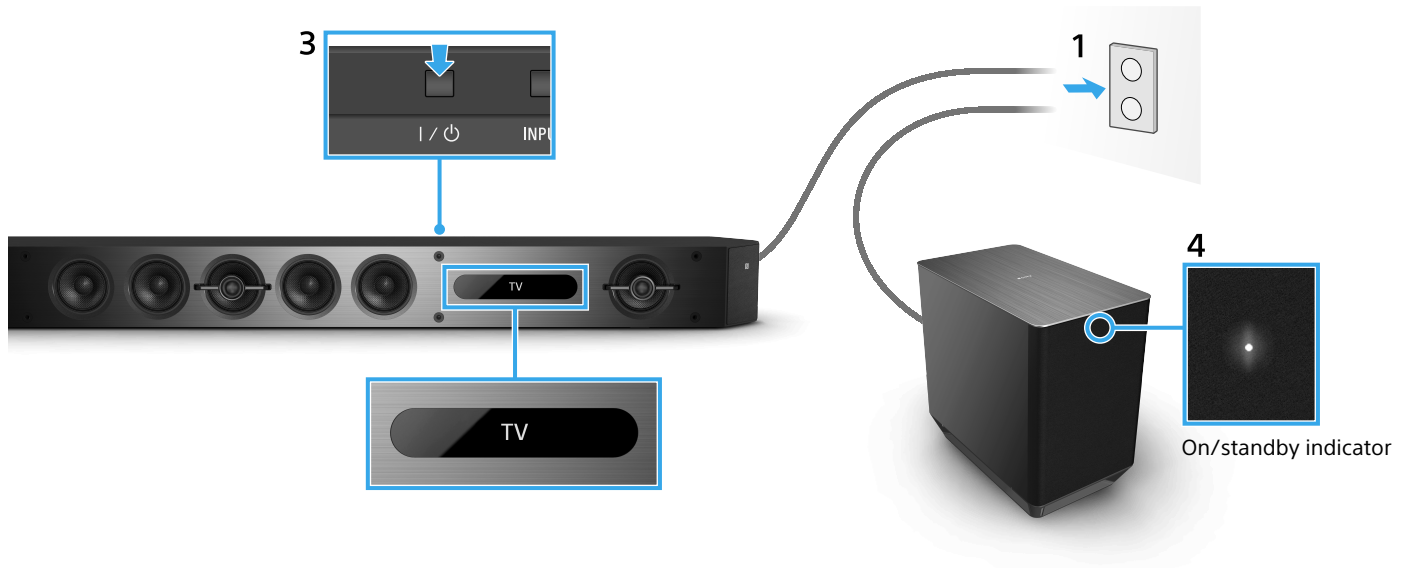

- 1 Connect the AC power cords (mains leads) of the Bar Speaker and the subwoofer.
- 2 Turn the TV on.
- 3 Press the I / ⏻ (on/standby) on the Bar Speaker.
The display lights.
- 4 Confirm that the on/standby indicator of the subwoofer is lit in green.
If not, the wireless transmission is not activated.
Refer to "No sound is heard from the subwoofer." of "Troubleshooting" in the supplied Operating Instructions.
- 5 Turn on the connected device.

6 Performing the Easy Setup



- 1 Press HOME on the remote control of this system.
The [Easy Setup] screen appears.


If the [Easy Setup] screen does not appear

Using the remote control of the TV, switch the input setting of the TV to that for the HDMI input jack the system is connected to.

- 2 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select an item, and then press \oplus to perform Easy Setup.
- 3 Once [Easy Initial Settings are complete.] appears, select [Finish].
The home menu appears.

- Tip**
- On-screen instructions are displayed in the language you selected in this step.
 - You can also select [Easy Setup] from [Setup] on the home menu.

7 Listening to the sound

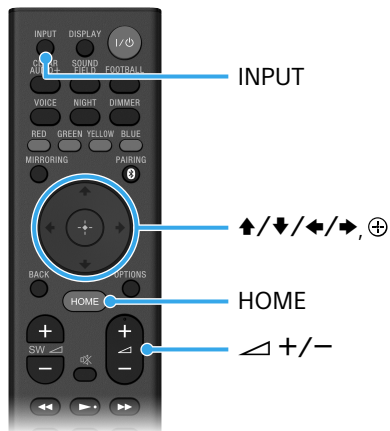

Listening to the audio of the TV

- 1 Select the desired program using the remote control of the TV. The screen switches to the television broadcast screen and the TV audio is output from the system. Adjust the volume pressing $\triangle + / -$ on the remote control of the system.

If the TV audio is not output from the system

Press INPUT on the remote control of the system repeatedly until [TV] appears on the front panel display of the Bar Speaker.

To enjoy an input device other than the TV

- 1 Press HOME on the remote control of the system. The home menu appears.
- 2 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select the desired input. You can select the following inputs.
[TV]/[HDMI1]/[HDMI2]/[HDMI3]/[Bluetooth Audio]/[Analog]/[USB]/[Screen mirroring]/[Home Network]/[Music Services]



* 4 5 5 8 4 9 6 2 4 * (1)