



LG

Life's Good

MUSICflow P7

Portable Bluetooth Speaker

NP7550

NP7550W

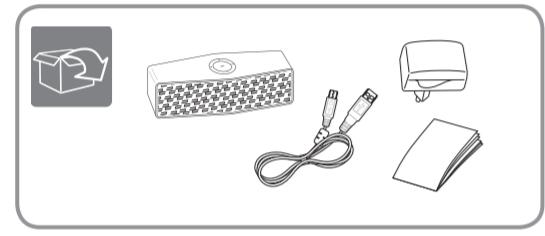
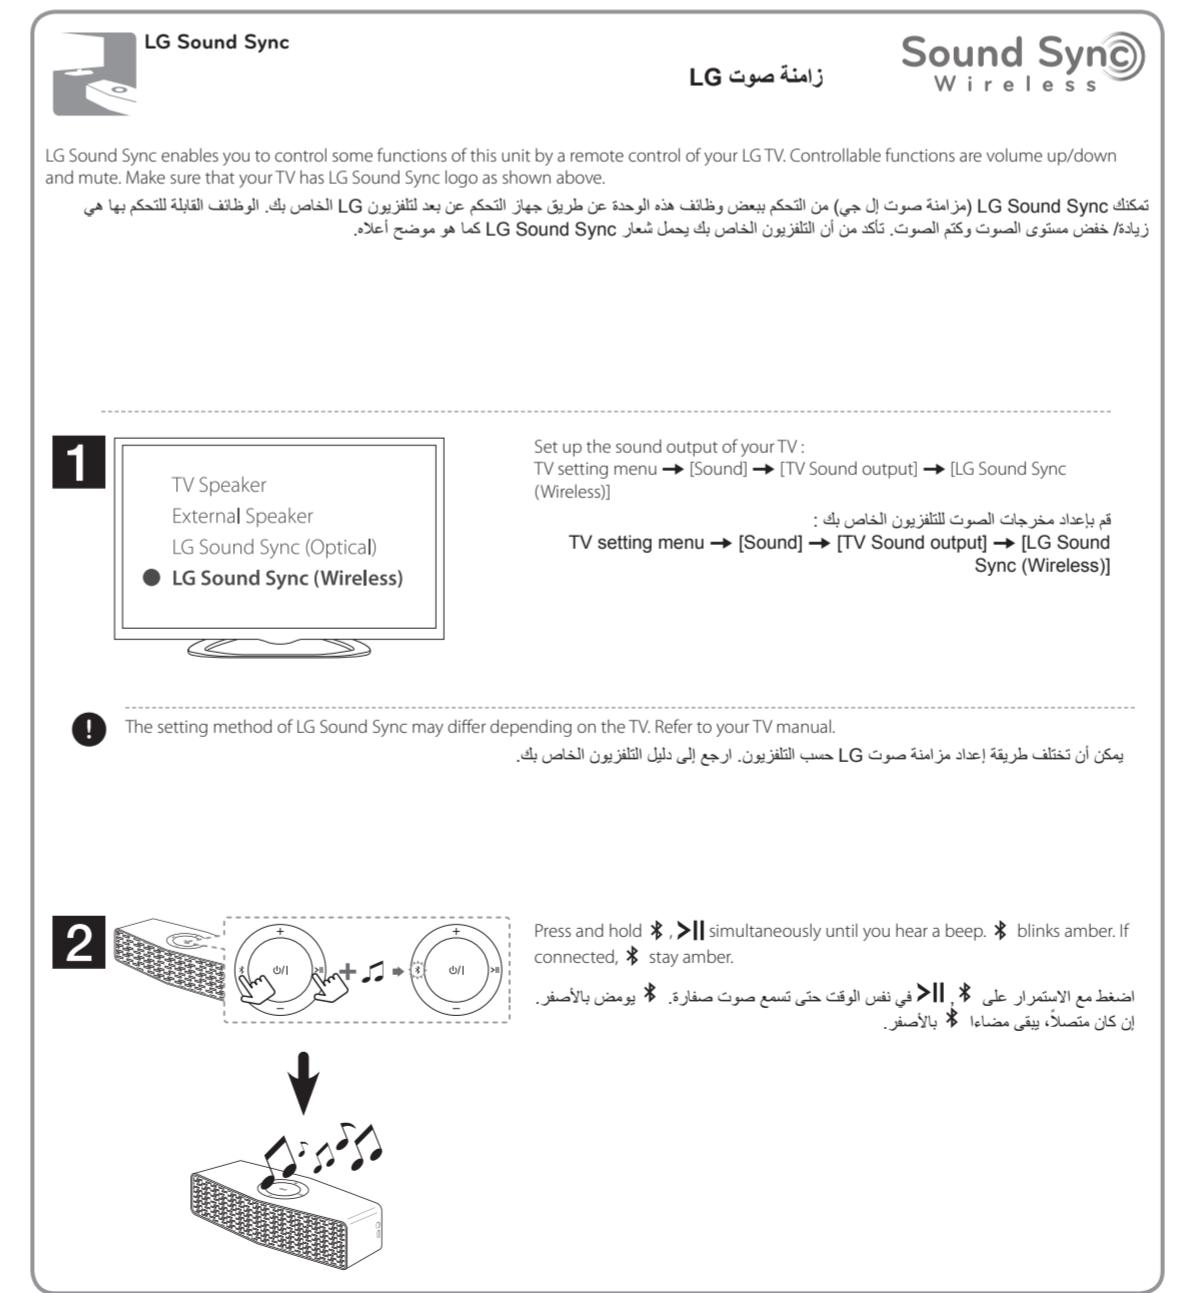
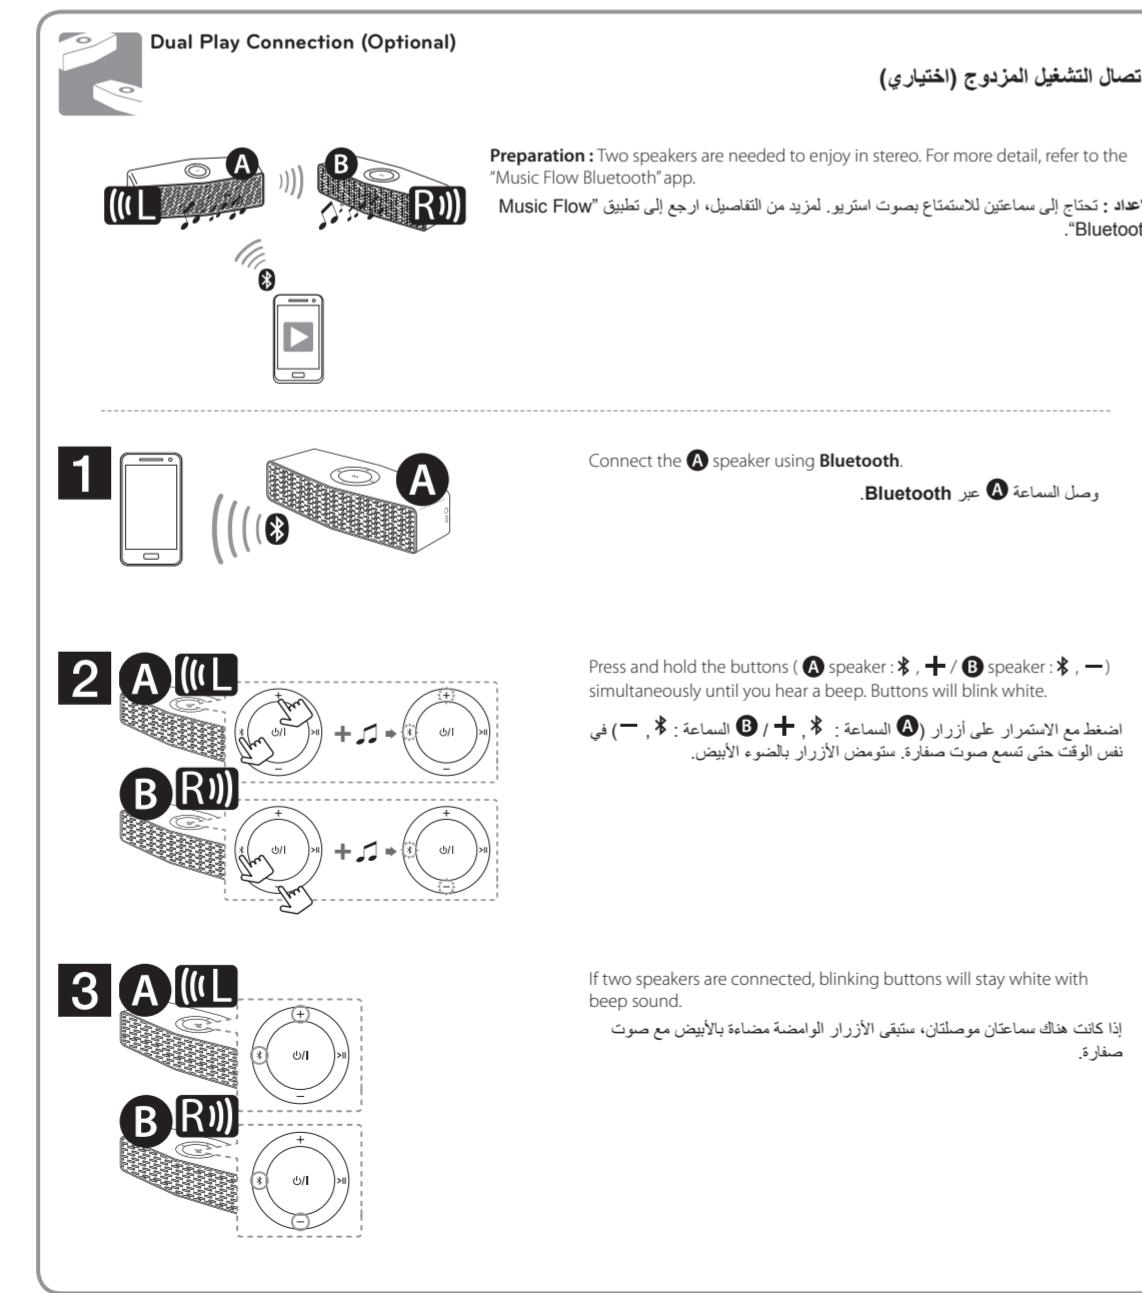
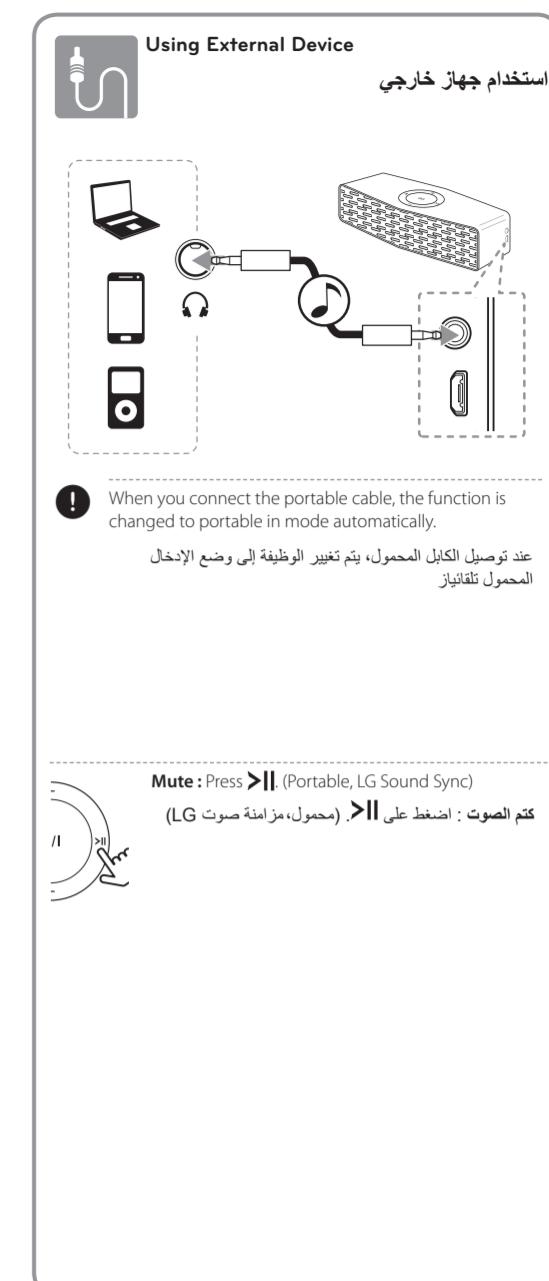
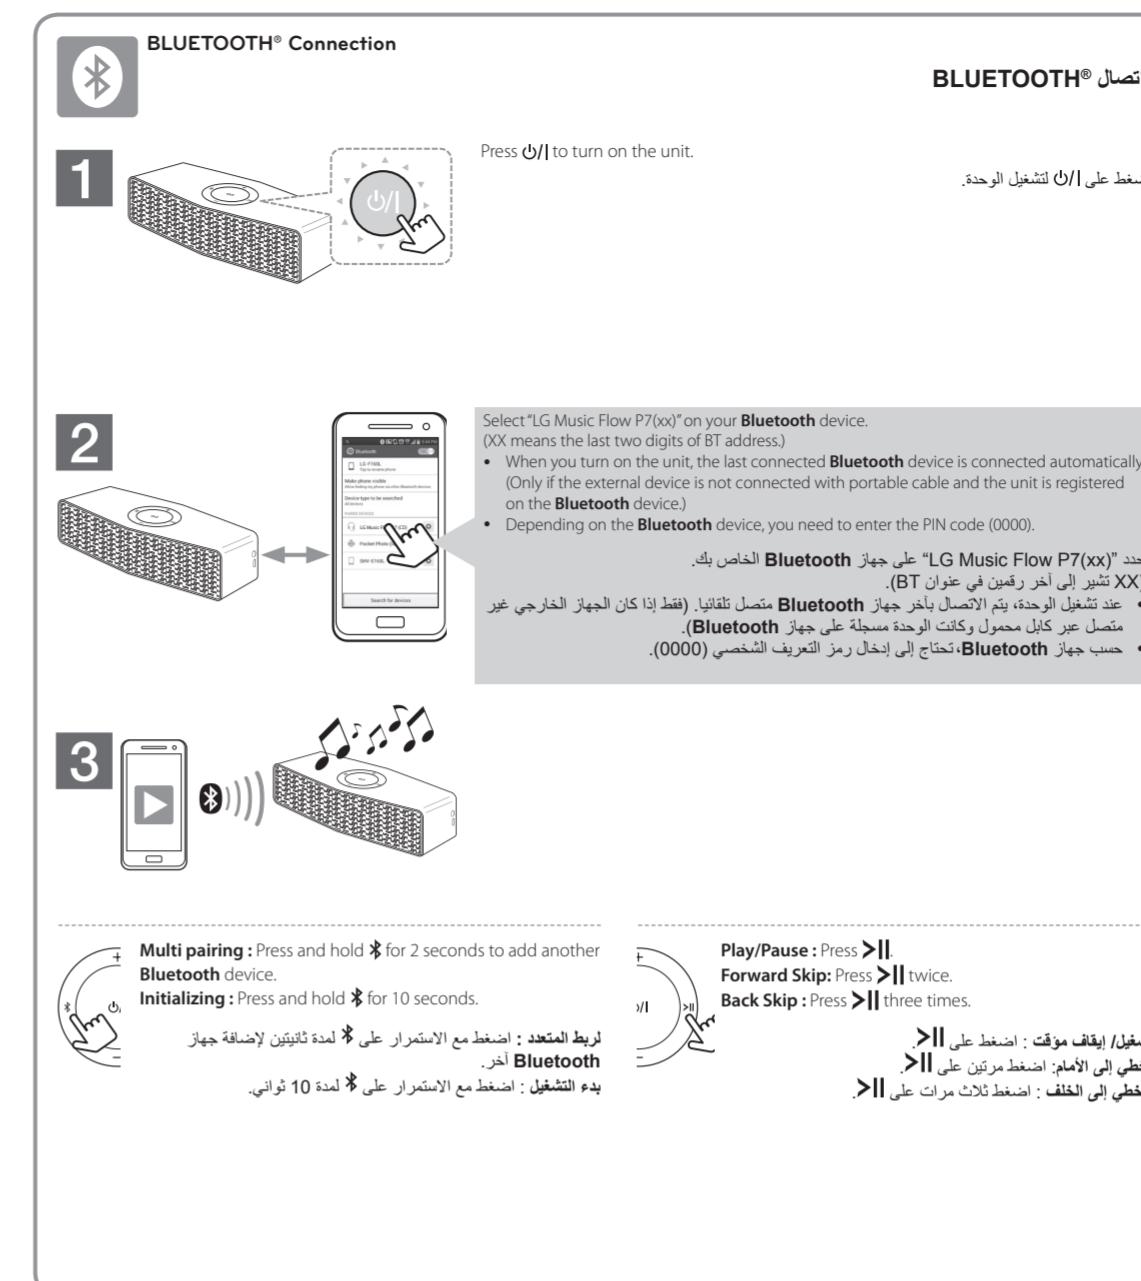
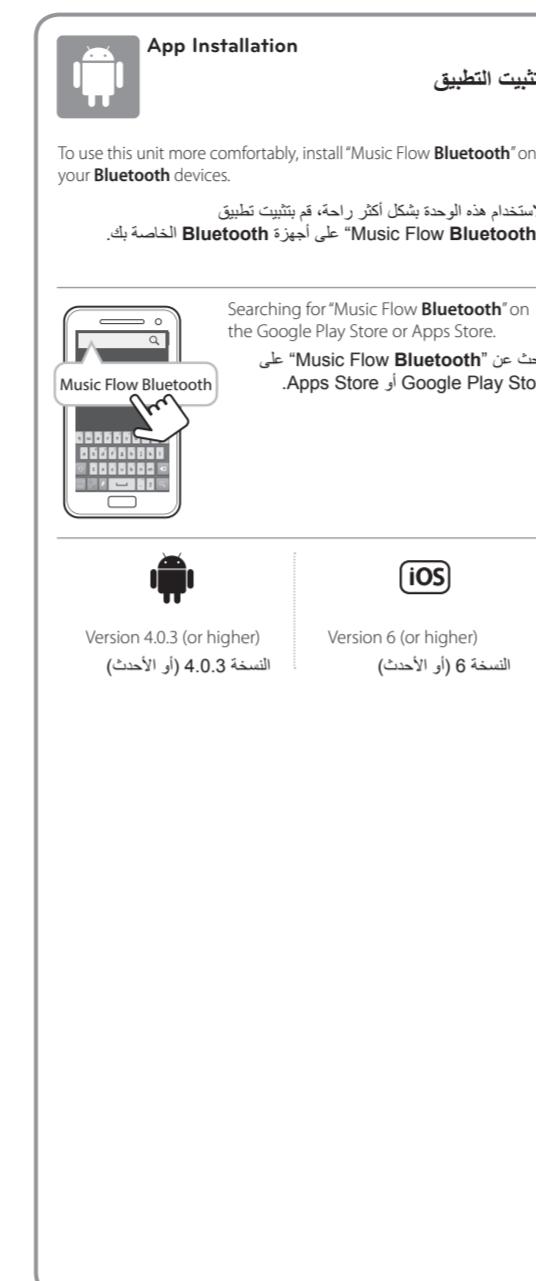
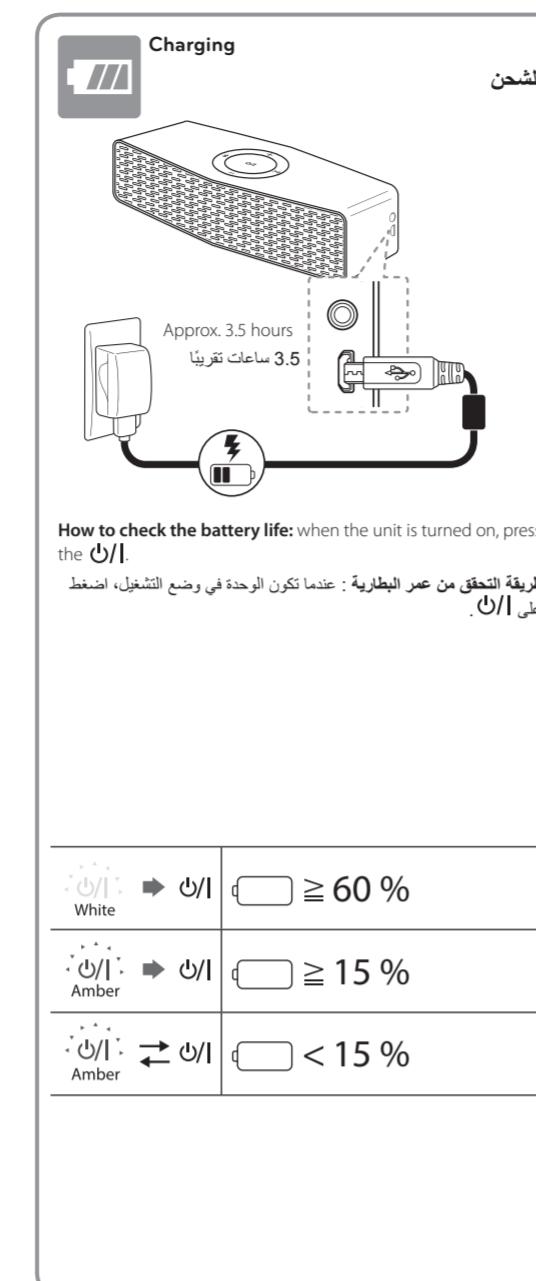
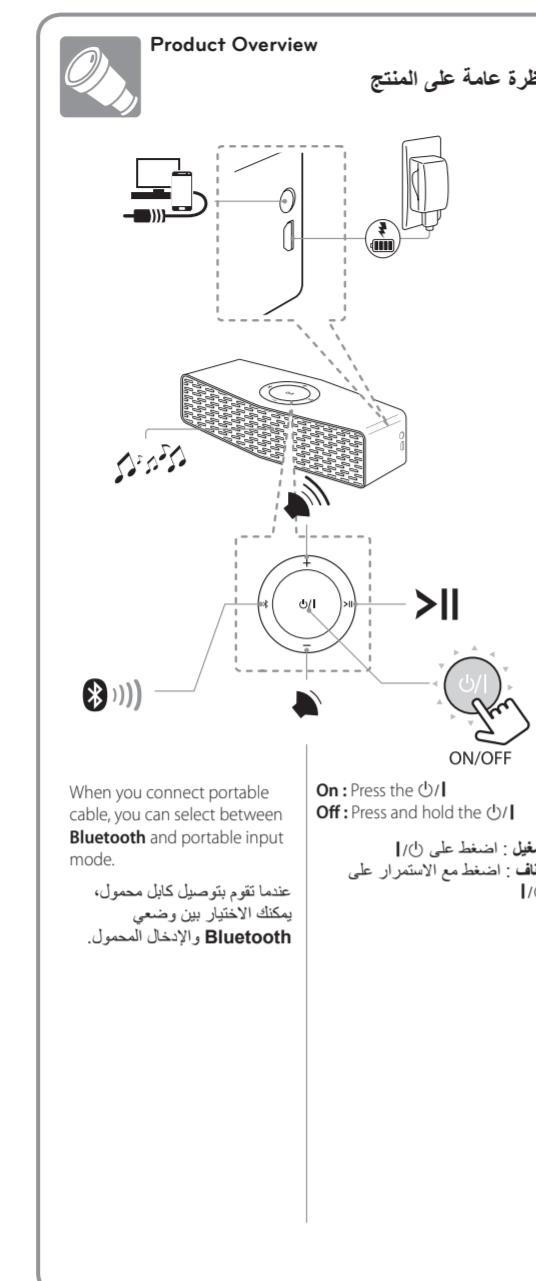
NP7550B



ENGLISH OWNER'S MANUAL

Please read this manual carefully before operating your set and retain it for future reference.

العربية **دليل المالك**
يرجى الاطلاع على دليل المالك هذا جيداً قبل تشغيل جهازك والاحتفاظ به للرجوع إليه في المستقبل.

<http://www.lg.com>

ENGLISH

Resetting

In case that the unit freezes due to malfunction, remove the rubber sleeve and press the reset hole using an object like a thin pin. Then the unit is turned off completely.

Notice for using this Unit

- You can connect this unit with up to 3 Bluetooth device simultaneously same method.
- The multi pairing connection is only supported on Android or iOS devices. (Multi pairing connection may not be supported depending on the connected devices.)
- Removable/detachable Bluetooth device (Ex: Dongle etc.) does not support multi pairing.
- Even if this unit connected up to 3 Bluetooth devices, you can play and control music by using only one of the connected devices.

Dual Play

- You use a Bluetooth device using dongle, you cannot use Dual Play.
- In portable input mode, you cannot use Dual Play.
- When you enjoy Dual Play, the multi pairing connection is not supported.
- When you enjoy Dual Play, the function cannot be changed.
- When Dual Play connection is on processing, you cannot search the units on other Bluetooth devices.
- When you disconnect Dual Play connection, press and hold the buttons **A** speaker, *****, +, **B** speaker, *****, - again.
- When you enjoy Dual Play, you can adjust the volume of both **A** and **B** speakers at the same time.
- When connecting Dual Play, Bluetooth devices connected to **B** speaker are disconnected and those connected to **A** speaker are disconnected except for the last connected device.
- One Bluetooth play is limited to only these units and is unavailable on other Music Flow series.
- To change the Bluetooth device in Dual Play mode, press and hold ***** for 2 seconds to disconnect current Bluetooth device and connect the desired Bluetooth device.
- In Dual Play mode, you can connect only the **A** speaker with the Bluetooth device.
- Dual Play is only supported on Android or iOS devices.

- LG Sound Sync**
- When the connections failed, make sure of the conditions of this unit and your TV, power, function and etc.
- If you turn off and on the TV, you must set LG sound sync connection again.
- This unit recognizes input signals such as Bluetooth and LG TV and then changes suitable function automatically.

Notice for Auto Power Off

- When the unit is in BT/TV sound Sync mode without music playback for 20 minutes or in portable input mode without button operation for 6 hours, this unit is turned off automatically.

How to disconnect the wireless network connection or the wireless device.

Turn off the unit.

Specification

- Power Supply:**
 - 5V 2.0 A (AC Adapter)
 - Built-in rechargeable battery
- Power consumption:**
 - 10W

- AC Adapter:**
 - Model WB-10A05FG
 - Manufacturer: Yang Ming Industrial
 - Input: AC 100~240V, 50/60 Hz
 - Output: 5V 2.0 A

Dimensions (W x H x D): Approx. 184 mm x 55 mm x 63 mm
Net Weight: Approx. 0.7 kg

Operating Temperature: 5°C to 35°C

Operating Humidity: 5% to 60%

External Connector:

- 3.5 mm mini jack
- Micro USB port for charging battery

Communication:

- Bluetooth

Amplifier:

- 10W x 10W (4 ohm at 1 kHz)
- THD: 10%

Speaker:

- Type : Built-in
- Impedance Rate : 4 ohm
- Rated Input Power : 10W
- Max. Input Power : 20W

Battery:

- Battery capacity: 2600 mAh
- Operating time is approx. 8 hours. (Based on 30% volume, 1kHz signal, 400 mW portable input and fully charged status) It may vary depending on the battery status and operational conditions.
- Design and specifications are subject to change without notice.

Troubleshooting

No power

- The battery is discharged. Recharge the battery.
- Connect the unit to the power supply with the AC adapter.

No sound or sound distortion

- The unit or your smart device's volume is set to minimum. Check and adjust the volume of the unit or Bluetooth device's volume.
- When you use an external device at high volume, the sound quality may be deteriorated. Lower the volume of the devices.
- If you use the unit for purposes other than listening to music, the sound quality may be lowered or the unit may not work properly.

- Bluetooth pairing does not work well.**
 - Switch Bluetooth off and on again on your Bluetooth device, then try pairing again.
 - Be sure your Bluetooth device is on.
 - Remove the obstacle in the path of the Bluetooth device and the unit.
 - Depending on the type of the Bluetooth device or surrounding environment, your device may not be paired with the unit.
 - While using Bluetooth, you may not be able to activate Music Flow Bluetooth app. Disconnect Bluetooth device you have connected before to use Music Flow Bluetooth app properly.
 - When your Bluetooth device have been already connected with other unit, disconnect the Bluetooth connection first. Then you can control your unit through Music Flow Bluetooth app.
 - Depending on the Bluetooth device, Music Flow Bluetooth app may work restrictively not work.
 - The connection you've made may be disconnected if you select other application or change the setting of the connected device via Music Flow Bluetooth app. In such case, please check the connection status.

- The unit does not operate normally.**
 - If the battery was fully discharged, stored Bluetooth information can be deleted.
 - Previous setting may not be saved when the unit's power is shut off.
 - In case of malfunction, **⑤/1** LED indicator is lit in red and white alternately. Please use the unit in proper place where the temperature or humidity is not so high or low. If this problem is resolved, contact LG Electronics customer care center.
 - In case of overload, all LED indicators stay white. Please turn the power off and then on again.

Safety Information



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

العربية

اعادة الضبط

الخطير

خطر التعرض لصance كهربائية

مدعوم بالفoltage

تحذير

تحذير