
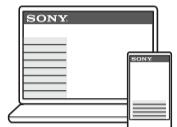
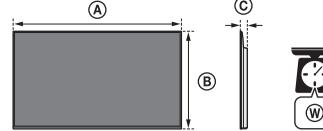


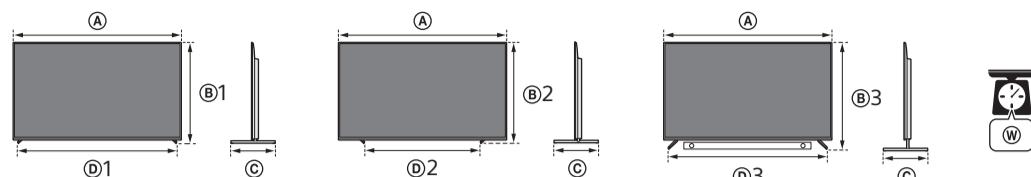


XR-83A80L / 77A80L / 65A80L / 55A80L

https://rd1.sony.net/help/tv/kga1/h_ga/

	(mm/毫米)*1	(kg/千克)*1	
(A)	(B)	(C)	(W)
XR-83A80L	1850	1067	53
XR-77A80L	1722	998	54
XR-65A80L	1448	836	53
XR-55A80L	1227	712	53
			42
			34.8
			23.3
			17.9



*1 (Approx. /
大約)

	(mm/毫米)*1	(kg/千克)*1						
(A)	(B1)	(B2)	(B3)	(C)	(D1)	(D2)	(D3)	(W)
XR-83A80L	1850	1072	1099	1137	428	1880	700	1880
XR-77A80L	1722	1027	1027	1069	385	1385	595	1385
XR-65A80L	1448	862	862	904	327	1164	867	1164
XR-55A80L	1227	738	738	780	327	1164	867	1164
								43.5
								36
								24.2
								18.8

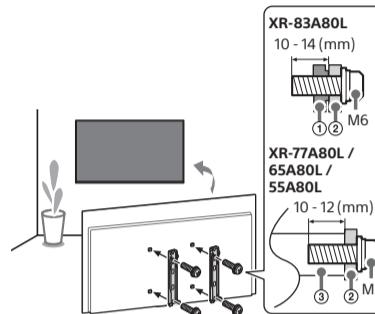
*1 (Approx. /
大約)

① TV's rear cover / 電視機後蓋
② Wall-Mount Bracket / 壁掛式支架
③ Wall-Mount Attachment VS / 壁掛連接件 VS

(mm) / (毫米)

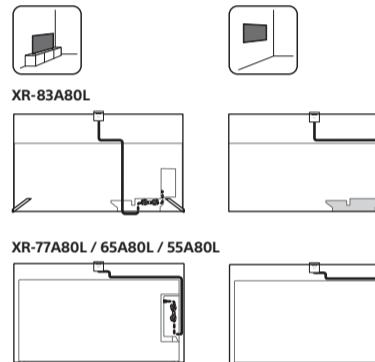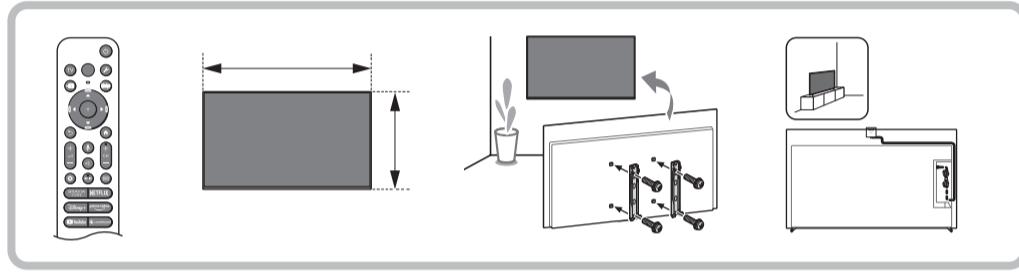Optional Camera and Microphone Unit (not supplied) Cable Management / 選購的
攝影機與麥克風組件 (非附帶) 線材管理

© 2023 Sony Corporation

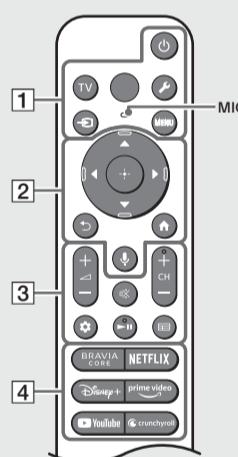

CT

遙控器外形、按鈕的佈局、可用性與功能視您的國家/區域/電視機型號或設定而可能略有不同。¹

① ⏻ (電源)
TV: 顯示電視機頻道清單或切換為輸入。
⚡ (快速設定): 顯示快速設定。
➡ (輸入選擇): 顯示並選擇輸入來源等。
MENU (控制選單): 顯示控制選單。
② ▲ / ▼ / ▶ / ▷ / ⊞: 在螢幕選單導航和選擇上。
⌚ (返回)
Ⓜ (主選單)
⌚ (Google 助理 / 謝克風): 使用 Google 助理^{2*3} 或語音搜尋⁴。
③ ⏸ + / - (音量)
🔇 (靜音)⁴
CH + / - (頻道)
⌚ (資訊主頁): 顯示資訊主頁。
▶▶ (指南): 顯示數位節目指南。
④ 應用按鈕

¹ 有關其他遙控器型號，請參閱線上說明指南以獲取詳情。² 僅限用於有限區域 / 國家 / 型號 / 語言。³ 使用 Google 助理或語音搜尋需要網際網路連線。⁴ 按住 ⏸ (靜音) 可使用輔助使用快捷鍵。EN
The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.*1

① ⏻ (Power)

TV: Display TV channel list or switch to input.

⚡ (Quick settings): Display Quick Settings.

➡ (Input select): Display and select the input source, etc.

MENU (Control menu): Display the Control menu.

② ▲ / ▼ / ▶ / ▷ / ⊞

On screen menu navigation and selection.

⌚ (Back)

Ⓜ (Home)

⌚ (Google Assistant / Microphone): Use Google Assistant^{2*3} or voice search⁴.

③ ⏸ + / - (Volume)

🔇 (Mute)⁴

CH + / - (Channel)

⌚ (Dashboard): Display Dashboard.

▶▶ (Guide): Display the digital programme guide.

④ App buttons

¹ For other remote control models, refer to the online Help Guide for details.² Only for limited region/country/model/language.³ Google Assistant or voice search requires an Internet connection.⁴ Accessibility shortcut is available by pressing and holding ⏸ (Mute).

EN

Note

- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Read the supplied safety documentation for additional safety information.

Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV. They can be found by removing the terminal cover.

This television is designed for use in Hong Kong and ensured the usage in Hong Kong only.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (SU-WL850 or SU-WL450)* (not supplied)

To Customers:

For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information

For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the product page for your TV model.

<https://www.sony-asia.com/support>

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.

- Sony is not liable for any damage or injury caused by mishandling or improper installation.

- Only qualified service personnel should carry out wall-mount installations.

- For safety reasons, it is strongly recommended that you use Sony accessories, including:

- Wall-Mount Bracket SU-WL850

- Wall-Mount Bracket SU-WL450

- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket.

- The diameter and length of the screws differ depending on the Wall-Mount Bracket model.

- Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

- * Only for limited region/country/model.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

1 Restart your TV by pressing the power button on the remote control for about four seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead).

Or, press the power button on the TV for about 40 seconds until the TV turns off.

2 Refer to the Help menu shown below.

3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.

4 Visit Sony support website (information provided at the end of the supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.

- Replace the batteries.

The parental lock password has been forgotten.

- Enter 9999 for the PIN and enter the new PIN.

The screen becomes darker while watching TV.

- If the whole image or part of the image remains still, the screen brightness will be gradually reduced to prevent image retention. This is not a malfunction of the TV.

You are concerned about image retention.

If the same image is displayed repeatedly or for long periods of time, image retention may occur. To reduce image retention, we recommend that you turn off the TV normally by pressing the power button on the remote control or the TV.

Note

- Perform Panel refresh only when image retention is particularly noticeable. Avoid performing Panel refresh more than once a year because it may affect the usable life of the panel.

- Images that include logos and bright colours (including white) easily cause image retention. Avoid displaying these types of images for long periods of time, otherwise image retention may occur.

A white line appears on the screen. (XR-83A80L only)

- The Panel refresh has been performed. A white line may be displayed on the screen during the Panel refresh. This is not a malfunction of the TV. Panel refresh starts after the TV is turned off and takes about one hour to complete.

The message [Panel refresh did not finish...] is displayed.

When i) the TV is turned on, ii) the AC power cord (mains lead) is unplugged, or iii) the room temperature falls outside of the range between 10 °C and 40 °C during the Panel refresh, the Panel refresh is not completed. Please avoid the above three conditions during the Panel refresh. (XR-83A80L only)

When i) the TV is turned on or ii) the AC power cord (mains lead) is unplugged during the Panel refresh, the Panel refresh is not completed. Please avoid the above two conditions during the Panel refresh. (Except XR-83A80L)

For more information, refer to the Help Guide. Press ⏻ (Input select) on the remote control and select [Help]. If [Help] does not exist, select [Edit] and add [Help].

Specifications

System

Panel system

 OLED (Organic Light Emitting Diode) Panel

TV system

 Analogue: I, D/K, B/G, M

 Digital: DTMB

Colour system

 PAL/SECAM/NTSC3.58/NTSC4.43

Channel coverage

 Analogue: UHF/VHF/Cable

 Digital: UHF

Sound output (W)

 XR-83A80L: 20 + 20 + 10 + 10

 XR-77A80L: 20 + 10 + 10 + 10 + 10

 XR-65A80L / 55A80L: 10 + 10 + 10 + 10 + 10

Wireless technology

 Protocol IEEE 802.11a/b/g/n/ac

 Bluetooth® Version 4.2

Input/Output jacks

• 1, • 2
USB port 1 supports High Speed USB (USB 2.0)
USB port 2 supports Super Speed USB (USB 3.2 Gen 1)
• LAN
10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, connection speed may differ. The communication rate and quality are not guaranteed.)

Power and others
Power requirements
220 V - 240 V AC, 50 Hz
Screen size (measured diagonally) (Approx.) (inches/cm)
XR-83A80L: 83 / 209.6
XR-77A80L: 77 / 194.7
XR-65A80L: 65 / 163.9
XR-55A80L: 55 / 138.8
Power consumption
Indicated on the rear of the TV
Standby power consumption⁶⁺⁷ (W)
0.5
Display resolution (horizontal × vertical) (pixels)
3840 × 2160
Output rating
500 mA (for USB 1), 900 mA (for USB 2)

Others
Optional accessories
Wall-Mount Bracket: SU-WL850 (except XR-83A80L), SU-WL450
Camera and Microphone Unit: CMU-BC1
Operating temperature
0 °C - 40 °C
Operating humidity: 10 % - 80 % RH (non-condensing)

¹ When 4096 × 2160p is input and [Wide mode] is set to [Normal], the resolution is displayed as 3840 × 2160p. To display 4096 × 2160p, set [Wide mode] setting to [Full 1] or [Full 2].

² Refer to the on screen menu to set [HDMI signal format].

³ Refer to the online Help Guide for details.

⁴ HDMI IN 3 and 4 only. Use the Ultra High Speed HDMI Cable to connect.

⁵ Connect your audio system to the HDMI IN 3 to route TV audio to your audio system.

⁶ Specified standby power is reached after the TV finishes necessary internal processes.

⁷ Standby power consumption will increase when your TV is connected to the network.

Note
• Optional accessories availability depends on countries/region/TV model/stock.
• Design and specifications are subject to change without notice.
• Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.
• Power consumption will increase when the built-in MIC is enabled as it is always listening.
• Visit Sony website for more information on product specifications.

Trademark Information
• Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.
• Gracenote, the Gracenote logo and "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.
• For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, Digital Surround, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.
• TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.

CT

註
• 有關“將電視機安裝在牆上”的指示已包含在這台電視機的使用說明書。
• 有關其他安全資訊，請閱讀隨附的安全檔案。

識別標籤的位置
電視機型號和電源等級的標籤位於電視機背面。拆除端子蓋即可找到這些標籤。

本電視設計在香港使用，只保證能在香港使用。

將電視機安裝在牆上

使用選購的壁掛式支架 (SU-WL850 或 SU-WL450)⁸ (非附帶)

致客戶：
出於產品保護及安全原因，Sony 強烈建議由 Sony 經銷商或授權的承包商安裝電視機。請勿嘗試自行安裝電視機。

致 Sony 經銷商和承包商：
安裝、定期維護及檢查本產品時，請充分注意安全。

壁掛式支架安裝資訊
有關壁掛式支架安裝的說明，請參閱您的電視機型號的產品頁上的安裝訊息（壁掛式支架）。

<https://www.sony-asia.com/support>
• 請遵循適合您的型號的壁掛式支架隨附的使用說明手冊。安裝本電視機須具備充足的專業知識，確定牆壁是否能夠承受電視重量時尤為如此。

• 對於因錯誤操作或安裝不當引致的任何損害，Sony 概不負責。
• 僅可由合格的維修人員執行掛壁安裝。

• 為了安全起見，強烈建議您使用 Sony 配件，包括：
- 壁掛式支架 SU-WL850
- 壁掛式支架 SU-WL450

• 將壁掛式支架安裝於電視機上時，務必要使用隨附於壁掛式支架的螺絲。隨附螺絲如插圖所示設計從壁掛式支架安裝表面量起。

螺絲的直徑和長度會因為壁掛式支架的型號而有所不同。

• 使用隨附螺絲以外的螺絲可能會造成電視機內部損壞或者掉落等等。

• 務必將未使用的螺絲及裏面底座存放於安全位置，直到您已準備好連接桌面底座。請將螺絲存放在兒童接觸不到的位置。

⁸ 僅限用於有限區域 / 國家 / 型號。

故障排除

以下問題的一般故障排除：黑螢幕、沒有聲音、凍結畫面、電視機沒有反應或網絡丟失，請依照以下步驟操作。

1 按遙控器上的電源按鈕大約五秒重新啟動電視機。電視機將重新啟動。如果電視機未恢復正常，請嘗試拔下 AC 電源線，然後按電視機上的電源按鈕再輕按此按鈕。等候兩分鐘，隨後插入 AC 電源線。

或者按電視機上的電源按鈕約四十秒，直到電視機關閉。

2 請參閱如下所示的說明選單。

3 將電視機連接至網路，然後執行軟件更新。Sony 建議您不斷更新您的電視機軟件。軟件更新將提供新功能和效能改善。

4 造訪 Sony 支援網站（提供的資訊在隨附安全文檔末尾）。

在插入電視機時，即使按遙控器或電視機上的電源按鈕，電視機也可能在一定時間不能開啟。

系統初始化需要一定時間。等待大約一分鐘，然後再次操作。

遙控器無效。

• 更換電池。

忘記家長鑑定的密碼。

• PIN 碼輸入 9999，然後輸入新的 PIN 碼。

觀看電視機時，螢幕變得更黑了。

• 如果整個影像或部分影像保持靜止，螢幕亮度將逐漸降低以防止影像殘留。這不是電視機故障。

您擔心影像殘留。

如果相同影像重複顯示或長時間顯示，可能出現影像殘留。為了減少圖像殘留，我們建議您透過按下遙控器或電視機上的電源按鈕來正常關閉電視機。

註

• 只有在影像殘留特別明顯時才執行面板更新。應避免每年執行多過一次面板更新，因為這可能會影響面板的使用壽命。

• 包括標誌及亮色（包括白色）的影像很容易導致影像殘留。避免長時間顯示這些類型的影像，否則可能出現影像殘留。

螢幕上顯示一條白線。（僅限 XR-83A80L）

• 已重新整理面板。面板更新期間，螢幕上可能顯示一條白線。這不是電視機故障。面板更新在關閉電視機後啟動，需要大約一個小時才能完成。

將顯示[面板重新整理未完成…]訊息。

當 i) 開啟電視時，ii) 拔下 AC 電源線（主電源線），或者 iii) 在面板更新期間，室內溫度在 10 °C 至 40 °C 之外，面板更新未完成。面板更新時，請避免上述三種情況。（僅限 XR-83A80L）

面板更新期間 i) 開啟電視或 ii) 拔下 AC 電源線（主電源線），面板更新未完成。面板更新時，請避免上述兩種情況。（XR-83A80L 除外）

• 聲音輸出 (瓦)
XR-83A80L: 20 + 20 + 10 + 10
XR-77A80L: 20 + 10 + 10 + 10 + 10
XR-65A80L / 55A80L: 10 + 10 + 10 + 10 + 10
無線技術
IEEE 802.11a/b/g/n/ac 協議
藍牙® 版本 4.2

輸入/輸出插孔

天線/纜線
VHF/UHF 的 75 歐姆外接端子

HDMI IN 1/2/3/4 (HDCP 2.3 相容)

視訊：

4096 × 2160p (50, 60 Hz)¹⁺², 4096 × 2160p (24 Hz)^{1, 3}, 3840 × 2160p (50, 60 Hz)^{2, 4}, 3840 × 2160p (24, 25, 30 Hz), 1080p (24, 30, 50, 60, 100, 120 Hz), 1080i (50, 60 Hz), 720p (24, 30, 50, 60 Hz), 576p, 480p, PC 格式⁵

3840 × 2160p (100, 120 Hz)²⁺⁴

音訊：

在 eARC (Enhanced Audio Return Channel) 模式下

有關詳情，請參閱線上說明指南。

eARC 模式除外

5.1 聲道線性 PCM: 32/44.1/48/88.2/96/176.4/192 kHz 16/20/24 位元, Dolby

Audio, Dolby Atmos, DTS

eARC/ARC (Enhanced Audio Return Channel/Audio Return Channel) (僅限 HDMI IN 3)⁶

在 eARC 模式下

有關詳情，請參閱線上說明指南。

在 ARC 模式下

兩聲道線性 PCM: 48 kHz 16 位元, Dolby Audio, Dolby Atmos, DTS

數位光纖插孔 (兩聲道線性 PCM: 48 kHz 16 位元, Dolby Audio, DTS)

• 1, • 2
USB 連接埠 1 支援高速 USB (USB 2.0)
USB 連接埠 2 支援超快速 USB (USB 3.2 Gen 1)

• 3 LAN

10BASE-T/100BASE-TX 接頭 (視網絡的作業環境而定，連線速度可能不同。不保證通訊率和通訊品質。)

電源和其他規格

電源需求

220 V - 240 V AC, 50 Hz

螢幕尺寸 (對角測量) (大約) (英寸/厘米)

XR-83A80L: 83 / 209.6

XR-77A80L: 77 / 194.7

XR-65A80L: 65 / 163.9

XR-55A80L: 55 / 138.8

耗電量

見電視機背面

待機耗電量⁶⁺⁷ (瓦)

0.5

顯示解析度 (水平 × 垂直) (畫素)

3840 × 2160

輸出率

500 mA (對於 USB 1), 900 mA (對於 USB 2)

其他

選用的配件

壁掛式支架: SU-WL850 (XR-83A80L 除外), SU-WL450

攝影機與麥克風組件: CMU-BC1

作業溫度

0 °C - 40 °C

操作溫度: 10 % - 80 % 相對濕度 (非冷凝)

¹ 當輸入 4096 × 2160p 且 [寬螢幕模式] 設為 [正常模式] 時，解析度將顯示為 3840 × 2160p。要顯示 4096 × 2160p，請將 [寬螢幕模式] 設定為 [全螢幕模式 1] 或 [全螢幕模式 2]。

² 請參閱螢幕選單設定 [HDMI 訊號格式]。

³ 有關詳情，請參閱線上說明指南。

⁴ 僅限 HDMI IN 3 & 4。使用 Ultra High Speed HDMI Cable 連接。

⁵ 將音訊系統連接至 HDMI IN 3 以傳送電視機音訊至音訊系統。

⁶ 電視機完成所需的內部處理後，達到規定的待機功率。

⁷ 當您的電視機連接至網絡時，待機耗電量將有所增加。



規格

系統
面板系統
OLED (有機發光二極管) 面板

電視系統
模式: I, D/K, B/G, M
數位: DTM

彩色系統
PAL/SECAM/NTSC 3.58/NTSC 4.43

頻道涵蓋範圍
模擬: UHF/VHF/纜線

數位: UHF



有關更多資訊，請參閱說明指南。
按遙控器上的 (輸入選擇)，選擇 [說明]。如果 [說明] 不存在，請選擇 [編輯] 並添加 [說明]。