



If you selected Manual:  
The Clock Set screen appears. Use the **▲▼** buttons to change the values in each field or use the number buttons to enter the values directly. Use the **◀▶** buttons to move from field to field. When done with all the fields, press **ENTER**.  
Available only when Clock Mode is set to Manual.

**■ Sleep Timer**

Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).

To cancel the Sleep Timer, select Off.

**Timer1 / Timer 2 / Timer 3**

Turns the TV on and off automatically at times and days you select. You can set three different on/off timer settings.

You must set the clock first.

**■ On / Off / Time Off:** Set the hour, minute, am/pm, and Activate/inactivate fields for the On / Off Time. Use the **◀▶** buttons to move from field to field, and then press the **ENTER** button. The options are listed below:

**■ TV Parental Guidelines:** You can block TV programs based on their ratings. This function allows you to control what your children are watching.

**■ MPA Rating:** You can block movies based on their MPA ratings. The Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or guardians with advanced information on which films are appropriate for children.

**■ Canadian English:** You can block TV programs based on their Canadian ratings.

**■ Downloadable US Rating:** You can use parental restriction information while watching TV channels.

**■ TV-USC Select TV or USB:** The USB device must be connected to your TV before you can select USB.

**■ Antenna:** Displays the current antenna source, Air, Cable, or Satellite.

**■ Channel:** If you have selected TV, select the desired channel.

**■ Music/Photo:** If you have selected USB, follow these steps to select a folder containing MP3 (Muzic) or JPEG (Photo) files on the USB device:

► The maximum number of files the TV can display, including sub folders, in one folder of a USB storage device is 1000.

► The media may not play smoothly if you use a USB device rated lower than USB 2.0.

1. Use the **◀▶** buttons to move to the field under Music or the field and then press the **ENTER** button. The TV displays a single folder (the Root folder) and the type of name of the device.

2. Press the **ENTER** button. A list of folders on the device appears.

► If there are no folders on your device, press the **Yellow** button.

► If you have selected USB, you can block TV programs based on their French Canadian ratings.

**■ Downloadable US Rating:** You can use parental restriction information while watching TV channels.

**Locking/Blocking Programs or Movies**

You lock or block programs and/or movies in essentially the same way for each option. Each option displays a grid or table. All the tables have ratings listed on the left. The **TV Parental Guidelines** option also has ratings of content listed across the top: Alt-Lock All TV ratings, FV: Fantasy Violence / V: Violence / S: Sexual Situation / L: Adult Language / D: Sexually Suggestive Dialog.

**■ Ratings:** You can lock or block programs based on their ratings.

**■ Content:** To select what will be turned on when the timer setting is activated. You can set the TV to turn on a specific channel or play back contents such as photo or audio files.

The use the **◀▶** buttons to move to the Contents field, and then press the **ENTER** button. The Contents screen appears. Use the **◀▶** buttons to move from field to field. Use the **▲▼** buttons to change the value in each field.

**■ Volume:** Set the desired loudness.

**■ Contents:** To select what will be turned on when the timer setting is activated. You can set the TV to turn on a specific channel or play back contents such as photo or audio files.

The use the **◀▶** buttons to move to the Contents field, and then press the **ENTER** button. The Contents screen appears. Use the **◀▶** buttons to move from field to field. Use the **▲▼** buttons to change the value in each field.

**■ TV-USC Select TV or USB:** The USB device must be connected to your TV before you can select USB.

**■ Antenna:** Displays the current antenna source, Air, Cable, or Satellite.

**■ Channel:** If you have selected TV, select the desired channel.

**■ Music/Photo:** If you have selected USB, follow these steps to select a folder containing MP3 (Muzic) or JPEG (Photo) files on the USB device:

► The maximum number of files the TV can display, including sub folders, in one folder of a USB storage device is 1000.

► The media may not play smoothly if you use a USB device rated lower than USB 2.0.

1. Use the **◀▶** buttons to move to the field under Music or the field and then press the **ENTER** button. The TV displays a single folder (the Root folder) and the type of name of the device.

2. Press the **ENTER** button. A list of folders on the device appears.

► If there are no folders on your device, press the **Yellow** button.

► If you have selected USB, you can block TV programs based on their French Canadian ratings.

**■ Downloadable US Rating:** You can use parental restriction information while watching TV channels.

**■ Change PIN:** Select Change PIN. Then press the **ENTER** button.

► If you have selected USB, you can select the days you want to activate the timer by using the **◀▶** buttons to highlight the day, and then pressing the **ENTER** button. To deselect a highlight, and then press the **ENTER** button.

**■ Repeat:** Select Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun or Manual.

If you select Once, you can select the days you want to activate the timer by using the **◀▶** buttons to highlight the day, and then pressing the **ENTER** button. The Timer screen re-appears.

4. Press the **RETURN** button. The Timer screen re-appears.

**■ Capture:** You can switch the capture function on or off. If captions are not available, they will not be displayed on the screen.

► The Caption feature does not work in Component or HDMI mode.

**■ Caption:** You can select the desired caption mode.

**■ Default / CCI / CCA / Text-4:** (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption mode may or may not work with digital channels.)

**■ Default / Service1 / Serviced / CCI / CCA / Text-4:** (Digital channels only) The Digital Captions function works with digital channels.

► Serviced-4 may not be available in digital caption mode depending on the broadcast.

**■ Digital Caption Options:** (Digital channels only) The default is Standard.

► Size: You can select Large, Small, Standard, and Large. The default is Standard.

► Font Style: Options include Default and Styles 0 to 7. The default is Style 0.

► Foreground Color: Options include Default, White, Black, Red, Green, Yellow, Magenta, and Cyan. You can change the color of the letters. The default is White.

► Background Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta, and Cyan. You can change the background color of the captions. The default is Black.

► Foreground Opacity: This adjusts the opacity of text. Options include Default, Transparent, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, and 100%.

► Background Opacity: This adjusts the opacity of the caption background. Options include Default, Transparent, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, and 100%.

► If you display the TV menu in Game Mode, the screen shakes slightly.

► Game Mode is not available when the input source is set to TV.

► After connecting the game console, set Game Mode to On. You may notice slightly reduced picture quality.

**Boot Logo:**

Enable or disable the display of the Samsung logo when you turn on the TV.

- 9 -

**Program Rating Lock**

The Program Rating Lock feature lets you block programs you've determined are inappropriate for your children based on the program's ratings. To access the Program Rating Lock feature and make any changes, you must enter a PIN (personal identification number). To watch a blocked program, you must also enter the same PIN. The Program Rating Lock is not available for HDMI or Component mode.

► The default PIN number of a new TV set is 0-0-0-0. You can set your own PIN. To change the PIN, use the **ENTER** button.

**■ Sleep Timer**

Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).

To cancel the Sleep Timer, select Off.

**Timer1 / Timer 2 / Timer 3**

Turns the TV on and off automatically at times and days you select. You can set three different on/off timer settings.

You must set the clock first.

**■ On / Off / Time Off:** Set the hour, minute, am/pm, and Activate/inactivate fields for the On / Off Time. Use the **◀▶** buttons to move from field to field, and then press the **ENTER** button. The options are listed below:

**■ TV Parental Guidelines:** You can block TV programs based on their ratings. This function allows you to control what your children are watching.

**■ MPA Rating:** You can block movies based on their MPA ratings. The Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or guardians with advanced information on which films are appropriate for children.

**■ Canadian English:** You can block TV programs based on their Canadian ratings.

**■ Downloadable US Rating:** You can use parental restriction information while watching TV channels.

**Locking/Blocking Programs or Movies**

You lock or block programs and/or movies in essentially the same way for each option. Each option displays a grid or table. All the tables have ratings listed on the left. The **TV Parental Guidelines** option also has ratings of content listed across the top: Alt-Lock All TV ratings, FV: Fantasy Violence / V: Violence / S: Sexual Situation / L: Adult Language / D: Sexually Suggestive Dialog.

**■ Ratings:** You can lock or block programs based on their ratings.

**■ Content:** To select what will be turned on when the timer setting is activated. You can set the TV to turn on a specific channel or play back contents such as photo or audio files.

The use the **◀▶** buttons to move to the Contents field, and then press the **ENTER** button. The Contents screen appears. Use the **◀▶** buttons to move from field to field. Use the **▲▼** buttons to change the value in each field.

**■ TV-USC Select TV or USB:** The USB device must be connected to your TV before you can select USB.

**■ Antenna:** Displays the current antenna source, Air, Cable, or Satellite.

**■ Channel:** If you have selected TV, select the desired channel.

**■ Music/Photo:** If you have selected USB, follow these steps to select a folder containing MP3 (Muzic) or JPEG (Photo) files on the USB device:

► The maximum number of files the TV can display, including sub folders, in one folder of a USB storage device is 1000.

► The media may not play smoothly if you use a USB device rated lower than USB 2.0.

1. Use the **◀▶** buttons to move to the field under Music or the field and then press the **ENTER** button. The TV displays a single folder (the Root folder) and the type of name of the device.

2. Press the **ENTER** button. A list of folders on the device appears.

► If there are no folders on your device, press the **Yellow** button.

► If you have selected USB, you can block TV programs based on their French Canadian ratings.

**■ Downloadable US Rating:** You can use parental restriction information while watching TV channels.

**■ Change PIN:** Select Change PIN. Then press the **ENTER** button.

► If you have selected USB, you can select the days you want to activate the timer by using the **◀▶** buttons to highlight the day, and then pressing the **ENTER** button. To deselect a highlight, and then press the **ENTER** button.

**■ Repeat:** Select Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun or Manual.

If you select Once, you can select the days you want to activate the timer by using the **◀▶** buttons to highlight the day, and then pressing the **ENTER** button. The Timer screen re-appears.

4. Press the **RETURN** button. The Timer screen re-appears.

**■ Capture:** You can switch the capture function on or off. If captions are not available, they will not be displayed on the screen.

► The Caption feature does not work in Component or HDMI mode.

**■ Caption:** You can select the desired caption mode.

**■ Default / CCI / CCA / Text-4:** (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption mode may or may not work with digital channels.)

**■ Default / Service1 / Serviced / CCI / CCA / Text-4:** (Digital channels only) The Digital Captions function works with digital channels.

► Serviced-4 may not be available in digital caption mode depending on the broadcast.

**■ Digital Caption Options:** (Digital channels only) The default is Standard.

► Size: You can select Large, Small, Standard, and Large. The default is Standard.

► Font Style: Options include Default and Styles 0 to 7. The default is Style 0.

► Foreground Color: Options include Default, White, Black, Red, Green, Yellow, Magenta, and Cyan. You can change the color of the letters. The default is White.

► Background Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta, and Cyan. You can change the background color of the captions. The default is Black.

► Foreground Opacity: This adjusts the opacity of text. Options include Default, Transparent, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, and 100%.

► Background Opacity: This adjusts the opacity of the caption background. Options include Default, Transparent, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, and 100%.

► If you display the TV menu in Game Mode, the screen shakes slightly.

► Game Mode is not available when the input source is set to TV.

► After connecting the game console, set Game Mode to On. You may notice slightly reduced picture quality.

**Boot Logo:**

Enable or disable the display of the Samsung logo when you turn on the TV.

- 10 -

**Eco Solution**

■ Energy Saving (Off / Low / Medium / High): Lets you adjust the brightness of the TV to reduce power consumption.  
■ No Signal Power Off (15 min. / 30 min. / 60 min. / 120 min. / 180 minutes): Sets how quickly the TV switches to standby mode if no signal is received.  
■ Auto Power Off (Off / On): When Auto Power Off is set to On, the TV will automatically turn off when no operation is detected