


QUICK SETUP GUIDE

SAMSUNG

UNPACK

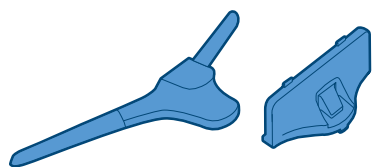

<40"-55">
8EA: M4 X L14


<60"-65">
A BN96-32380B (4EA: M4 X L14)
B BN96-38693A (4EA: M4 X L14)



SAMSUNG SMART REMOTE
& BATTERIES (AA X 2)










POWER CORD

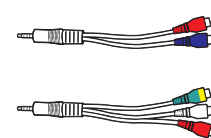


COMPONENT IN / AV IN ADAPTER

USER MANUAL
REGULATORY GUIDE


ASSEMBLE

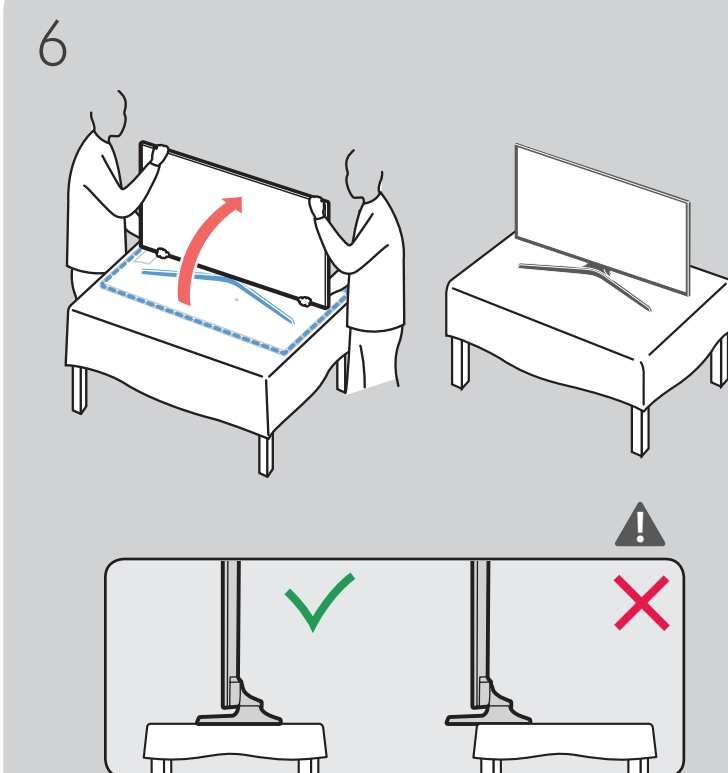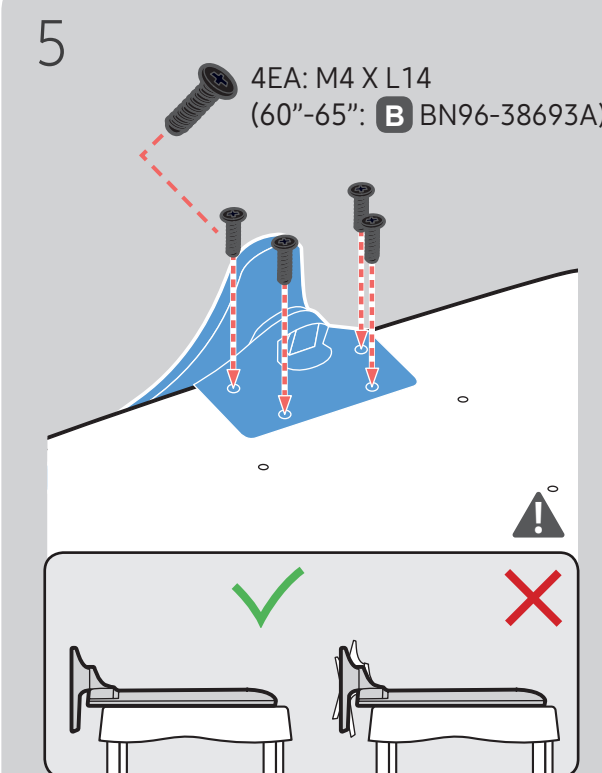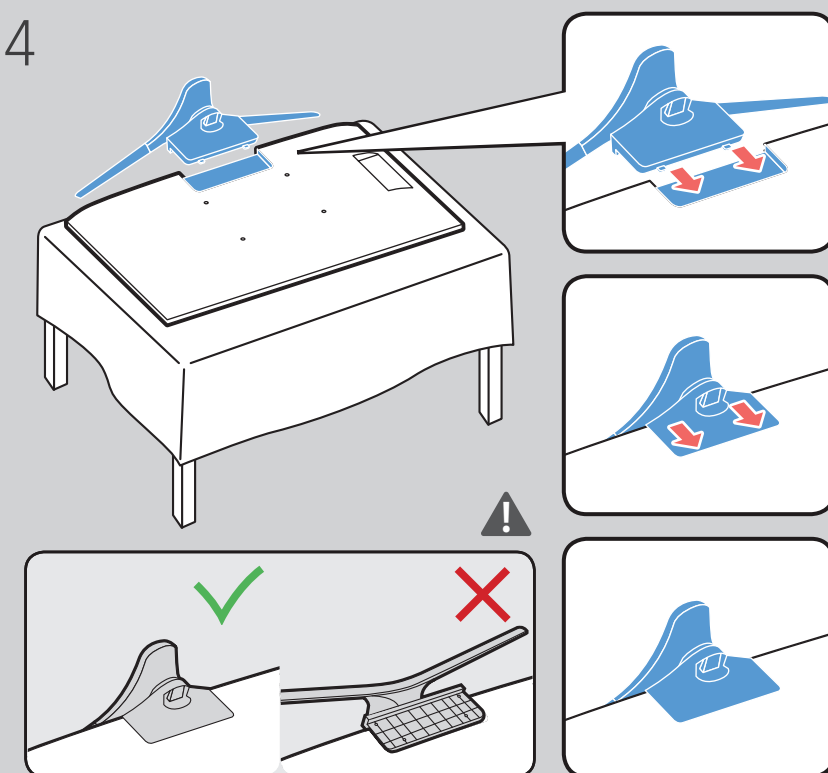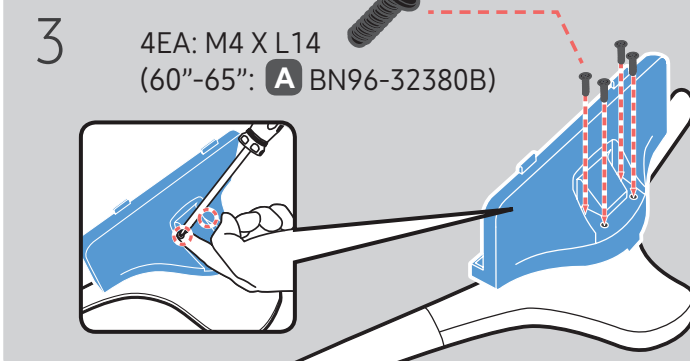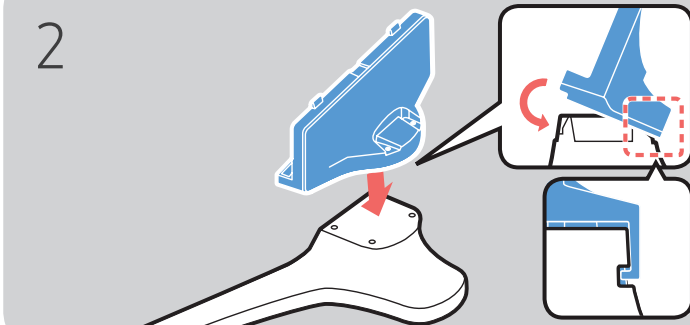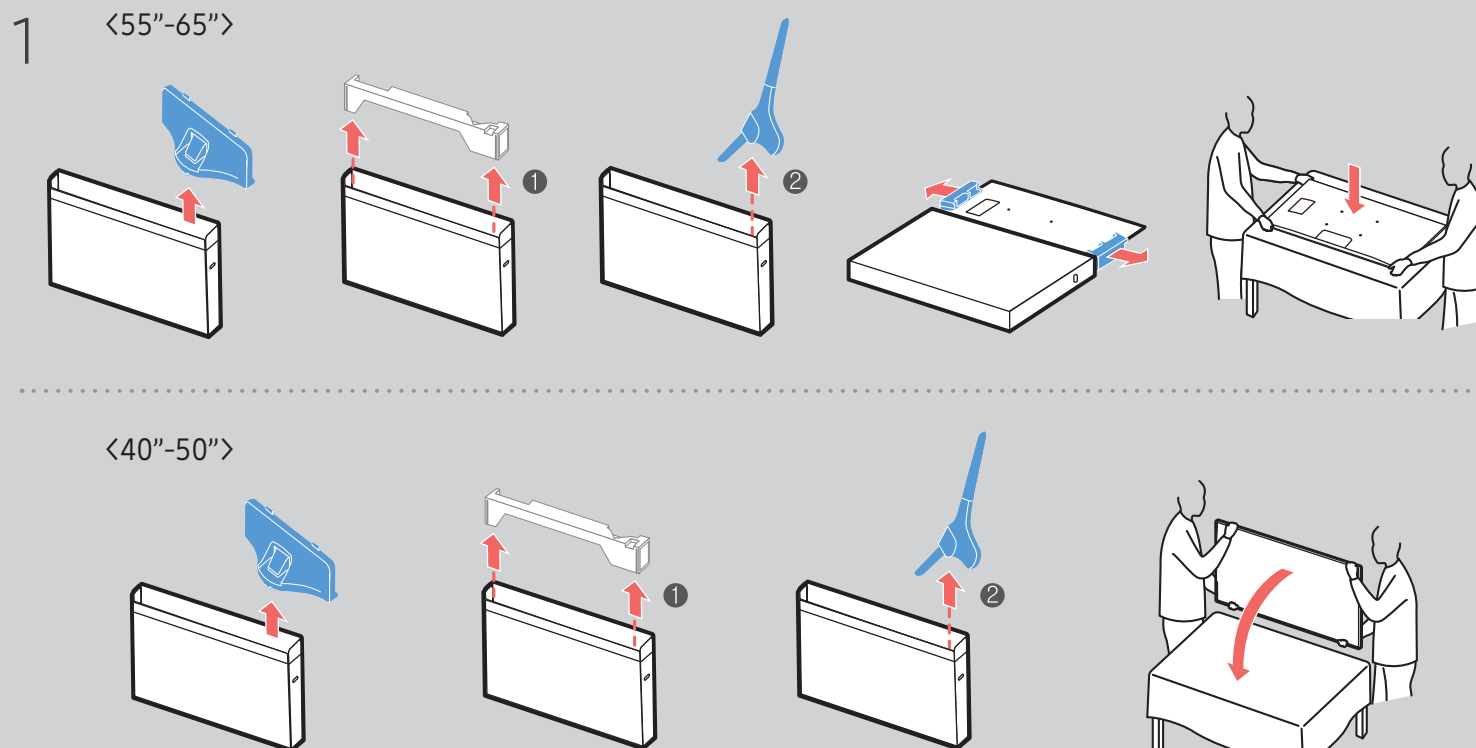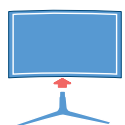




BN68-07841A-01

 

CONNECT

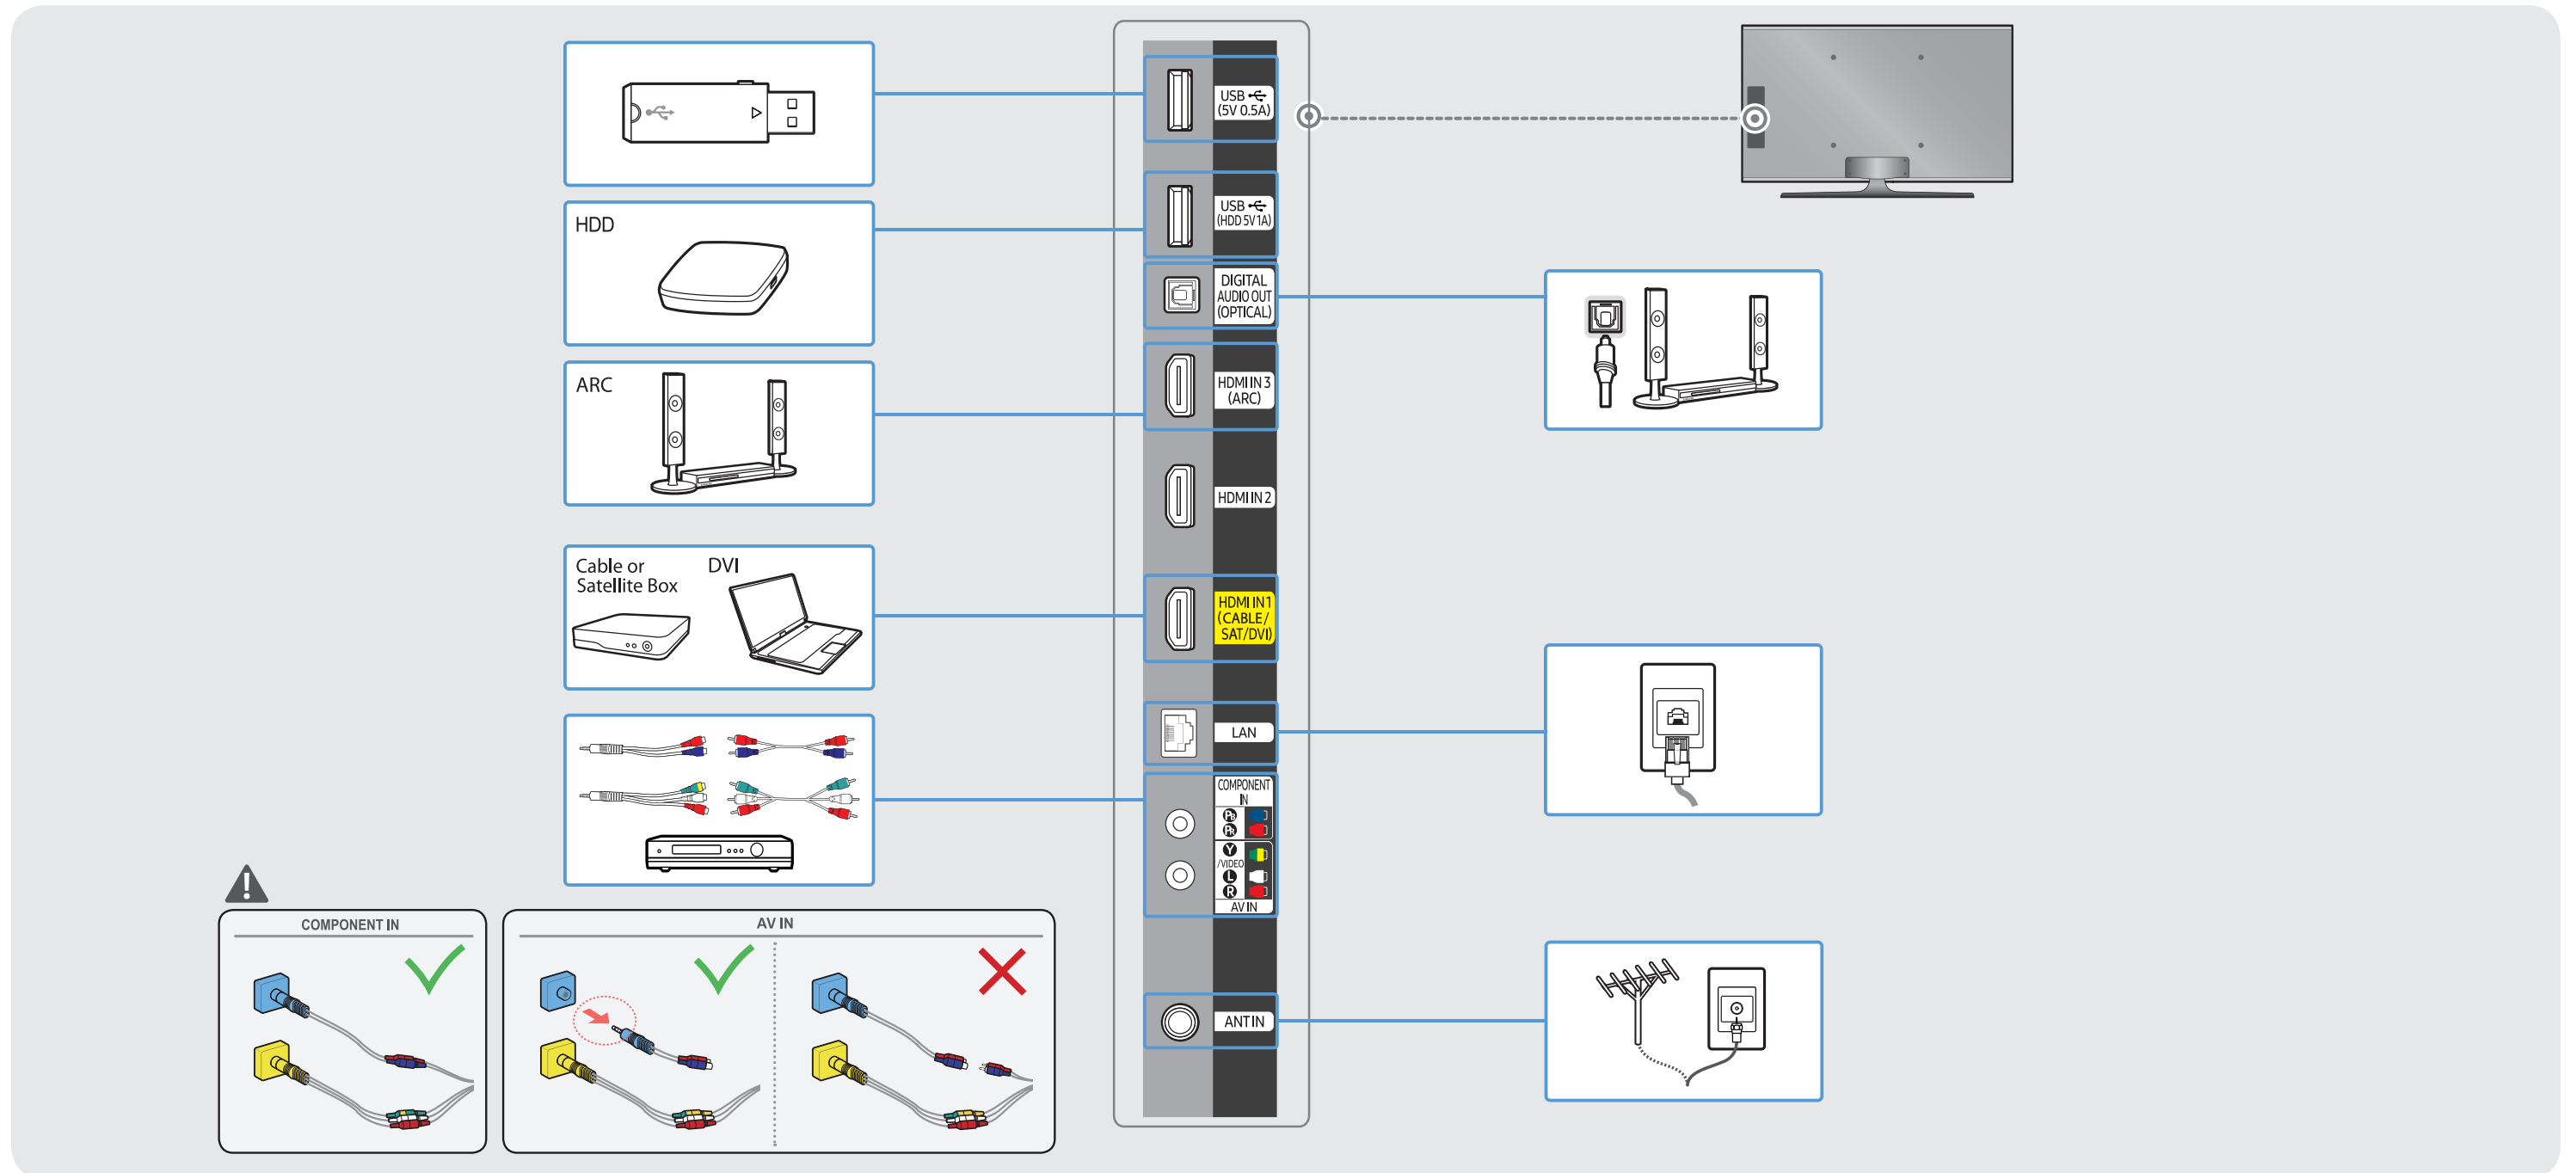

INITIAL SETUP

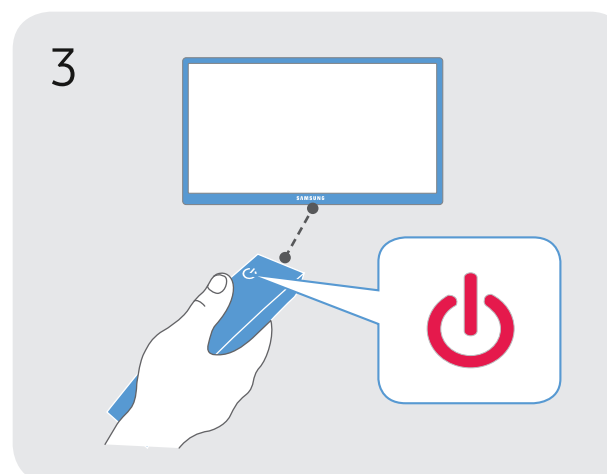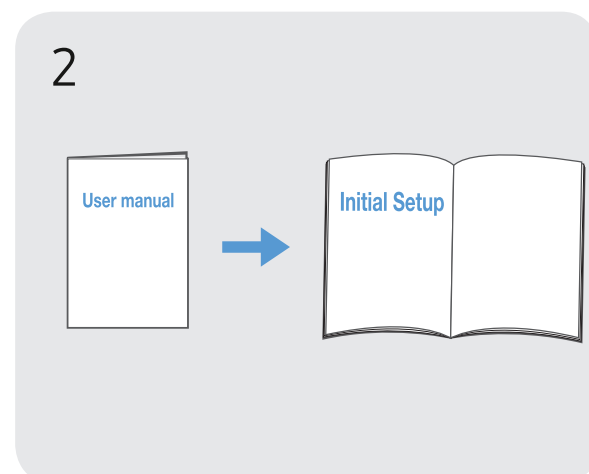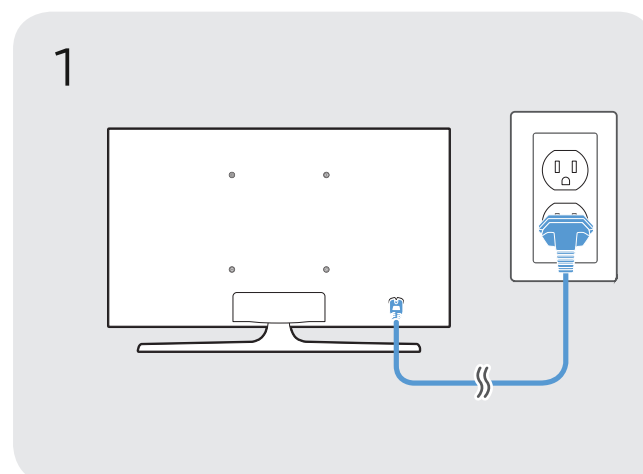

SMART REMOTE BUTTON GUIDE

