


SAMSUNG




BN68-15137A-01

About the Samsung SolarCell Remote (Samsung Smart Remote)



THE PLASTIC PART OF
21 SMART CONTROL
CONTAINS A MINIMUM OF
24% POST-CONSUMER
RECYCLED POLYCARBONATE (PC)
UL/CE/CEC

Consumes
86% less energy
than previous
model

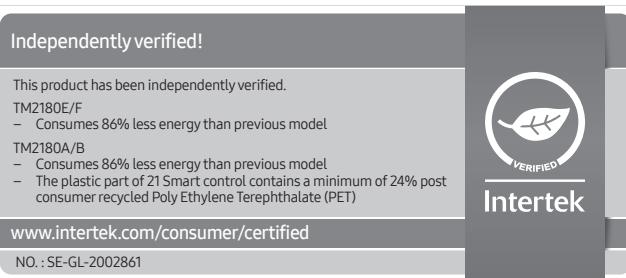

Independently verified!

This product has been independently verified.

TM2180E/F


- Consumes 86% less energy than previous model

TM2180A/B

- Consumes 86% less energy than previous model
- The plastic part of 21 Smart control contains a minimum of 24% post consumer recycled Poly Ethylene Terephthalate (PET)

www.intertek.com/consumer/certified

NO. : SE-GL-2002861

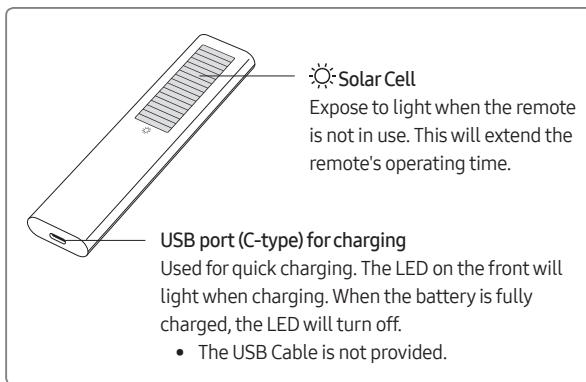


Solar Cell

Expose to light when the remote is not in use. This will extend the remote's operating time.

USB port (C-type) for charging

Used for quick charging. The LED on the front will light when charging. When the battery is fully charged, the LED will turn off.

- The USB Cable is not provided.

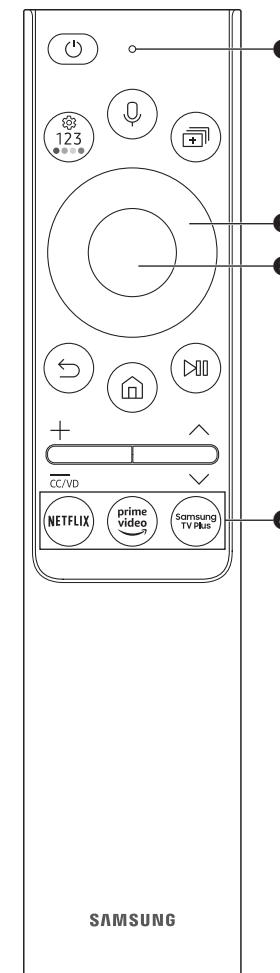

Button	Description
(Power)	Press to turn the TV on or off.
(MIC / LED)	Used as MIC when using voice recognition with the remote control. <ul style="list-style-type: none"> • Do not impact the MIC hole or use a sharp object to poke into the hole.
(Voice Assistant)	Runs Voice Assistant. Press and hold the button, say a command, and then release the button to run Voice Assistant. <ul style="list-style-type: none"> • The supported Voice Assistant's languages and features may differ by geographical region.
(Settings - Number - Color button)	Each time you press this button, Settings menu / virtual numeric pad / Option pad with Color buttons are displayed alternately. <ul style="list-style-type: none"> • Use this button to access additional options that are specific to the feature in use. • Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select Done or Enter Number to enter a numeric value. Use to change the channel, enter a PIN, enter a ZIP code, etc.
(Multi View)	Press the button to directly enter the Multi View function.
(Directional button (up, down, left, right))	Use to navigate the menu or move the focus to highlight items on the Home Screen.
(Select)	Selects or runs a focused item. When pressed while you are watching a broadcast program, detailed program information appears.
(Return)	Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a program, the previous channel appears.
(Smart Hub)	Press to switch to the Media Home. From the Ambient Mode screen, press to switch to the Ambient Mode Home.
(Play/pause)	When pressed, the playback controls appear. Using these controls, you can control the media content that is playing. <ul style="list-style-type: none"> To use Game Bar, press and hold the button in Game Mode. • Game Bar may not be supported depending on the model or geographical area.
(+/- (Volume))	Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 2 seconds or more, the Accessibility Shortcuts appears.
(^ / (Channel))	Move the button up or down to change the channel. To see the Guide screen, press the button. When pressed for 1 second or more, the Channel List screen appears. <ul style="list-style-type: none"> Press and hold the button up or down to quickly change the channel.
(Launch app button)	Launch the app indicated by the button. <ul style="list-style-type: none"> • Available apps may differ depending on the geographical area or contents provider.
(+ / (Pairing))	If the Samsung Smart Remote does not pair to the TV automatically, point it at the front of the TV, and then press and hold the and buttons simultaneously for 3 seconds or more.

- Use the Samsung Smart Remote less than 20 feet (6 m) from the TV. The usable distance may vary with the wireless environmental conditions.
- The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.
- The Universal Remote function operates normally only when you use the Samsung Smart Remote that comes with the TV.
- It is recommended to use an original Samsung charger. Otherwise, it may cause performance degradation or failure of the product. In this case, the warranty service is not applicable.
- When the remote control does not work due to low battery, charge it by using the USB-C type port.





Fire or explosion may occur, resulting in damage to the remote control or personal injury.

- Do not apply shock to the remote control.
- Be careful not to let foreign substances such as metal, liquid, or dust come in contact with the charging terminal of the remote control.
- When the remote control is damaged or you smell smoke or burning fumes, immediately stop operation and then repair it at the Samsung service center.
- Do not arbitrarily disassemble the remote control.
- Be careful not to let infants or pets suck or bite the remote control. Fire or explosion may occur, resulting in damage to the remote control or personal injury.



Au sujet de Samsung SolarCell Remote (Télécommande intelligente Samsung)

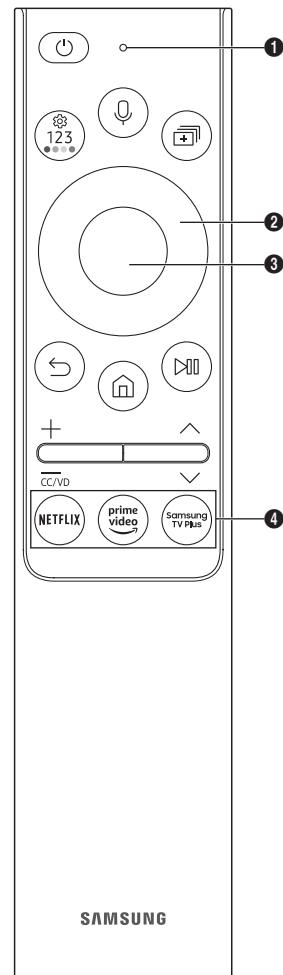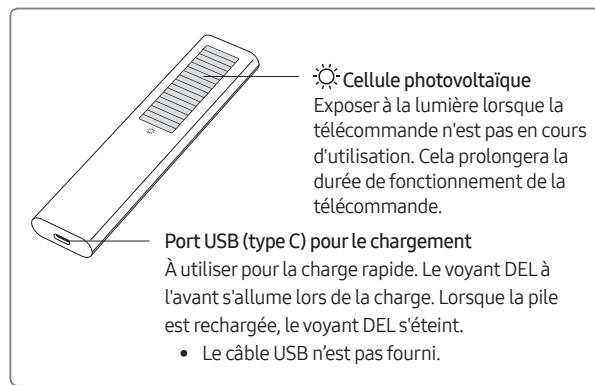

Touche	Description
(Alimentation)	Permet de mettre le téléviseur sous tension ou hors tension.
1 Micro / DEL	Sert de micro lors de l'utilisation de la reconnaissance vocale avec la télécommande. • Ne faites pas subir de choc au micro et n'insérez pas d'objet pointu dans l'orifice.
(Assistant vocal)	Exécutez la fonction Assistant vocal. Appuyez sur la touche en maintenant la pression, prononcez une commande vocale, et relâchez la touche afin de lancer Assistant vocal. • Les langues et fonctions prises en charge par Assistant vocal peuvent varier d'une région à l'autre.
(Paramètres - Nombre - Boutons de couleur)	Chaque fois que vous appuyez sur cette touche, le menu Paramètres/le pavé numérique virtuel/le pavé d'options avec les boutons de couleur s'affichent alternativement. • Utilisez cette touche pour accéder à des options supplémentaires associées à la caractéristique utilisée. • Appuyer pour que le pavé numérique virtuel s'affiche à l'écran. Utiliser le pavé numérique pour saisir des valeurs numériques. Sélectionnez des nombres, puis sélectionnez Fait ou sélectionnez Enter Number pour saisir une valeur numérique. Le pavé numérique sert à changer de chaîne, entrer un NIP, entre un code postal, etc.
(Multi View)	Appuyez sur le bouton pour entrer directement la fonctionnalité Multi View.
2 Pavé directionnel (haut, bas, gauche, droite)	Utilisez-le pour naviguer dans le menu, ou pour déplacer la cible de saisie afin de surligner les éléments de L'écran Accueil.
3 Sélectionner	Permet de sélectionner ou d'exécuter un élément ciblé. En appuyant sur cette touche pendant que vous regardez une émission, de l'information détaillée au sujet de l'émission s'affiche.
(Retour)	Appuyez sur cette touche pour revenir au menu précédent. En appuyant pendant au moins 1 seconde, la fonction en cours d'exécution est interrompue. En appuyant sur cette touche pendant que vous regardez une émission, vous affichez la chaîne précédente.
(Smart Hub)	Appuyez sur la touche correspondante pour accéder à l'accueil Média. Depuis l'écran Ambient Mode, appuyez sur la touche correspondante pour accéder à l'accueil Ambient Mode.
(Lecture/pause)	En appuyant sur cette touche, vous affichez le guide des commandes de lecture. Ces commandes vous permettent de commander le contenu média en cours de lecture. Pour utiliser la Barre de jeux, appuyez sur la touche et maintenez la pression pendant que vous êtes en Mode Jeu. • Il se peut que Barre de jeux ne soit pas pris en charge, selon le modèle ou la région.
+/- (Volume)	Appuyez sur la touche vers le haut ou vers le bas pour ajuster le volume. Pour mettre la sourdine, appuyez sur la touche. Appuyez sur la touche pendant au moins 2 secondes pour afficher le menu Raccourcis d'accessibilité.
^ / v (Chaîne)	Appuyez sur la touche vers le haut ou vers le bas pour changer de chaîne. Pour voir l'écran Guide, appuyez sur la touche. En appuyant pendant au moins 1 seconde, l'écran Liste des chaînes s'affiche. Appuyez sur la touche vers le haut ou vers le bas pour changer rapidement de chaîne.
4 Touche de lancement de l'application	Lance l'application indiquée par la touche. • La disponibilité des applications peut varier selon la région ou le fournisseur de contenu.
▷ + ▶ (Pairage)	Si l'appariement de la Télécommande intelligente Samsung avec le téléviseur ne se fait pas automatiquement, pointez-la vers le devant du téléviseur, puis appuyez simultanément, en maintenant la pression, sur les touches ▷ et ▶ pendant 3 secondes au minimum.
-	Utilisez la Télécommande intelligente Samsung à moins de 6 m (20 pi) du téléviseur. La distance d'utilisation appropriée peut varier en fonction des conditions de l'environnement sans fil.
-	Les images, les touches et les fonctions de la Télécommande intelligente Samsung peuvent varier selon le modèle et la région.
-	La fonction Configuration de la télécommande universelle fonctionne normalement seulement lorsque vous utilisez la Télécommande intelligente Samsung qui est fournie avec le téléviseur.
-	Il est recommandé d'utiliser un chargeur Samsung d'origine. Autrement, il peut en résulter une dégradation des performances ou une défaillance du produit. Dans ce cas, le service de garantie ne s'applique pas.
-	Lorsque la télécommande ne fonctionne pas en raison d'un faible niveau de batterie, chargez-la à l'aide du port de type USB-C.



- Un incendie ou une explosion pourrait se produire, provoquant des blessures ou des dommages à la télécommande.
- Évitez de faire subir des chocs à la télécommande.
 - Prenez soin de ne pas laisser de substances étrangères comme du métal, un liquide ou de la poussière entrer en contact avec la borne de recharge de la télécommande.
 - Lorsque la télécommande est endommagée, ou si vous sentez une odeur de fumée ou d'autres émanations, cessez immédiatement l'utilisation et faites-la réparer à un centre de service Samsung.
 - Évitez de désassembler au hasard la télécommande.
 - Veillez à ne pas laisser les nourrissons ou les animaux domestiques sucer ou mordre la télécommande. Un incendie ou une explosion pourrait se produire, provoquant des blessures ou des dommages à la télécommande.